 
FGVL Flanged Globe Valve Linkage For Use with AVK and EV and RV Series Actuators









Technical Data		
Service	chilled or hot water and steam	
Applicable Valve Size	2-1/2" [64], 3" [80], 4" [101], 5" [127], 6" [152]	
Stem	316 stainless steel	
Frame, plate, base	aluminum, steel (fits competitor bonnets up to 2.3" dia.)	
Collar	aluminum	
Coupling	GF Nylon supplied	
Housing Material	Aluminum die cast and plastic casing	
Stem Adaptor	steel/Aluminum	
Stroke	1.25" [32 mm] AVK, 2" [50 mm] EV/RV	
Mounting Position	360°	
Media Temperature	20°F to 250°F [-7°C to 120°C]	
Range (Water)		
Media Temperature	32°F to 338°F [0°C to 170°C]	
Range (Steam)		
Weight	9 lb [4.1 kg]	

For close-off pressure reference Select Pro or Retrofit Technical Documentation.

Application

The FGVL retrofit kit is designed to easily attach AVK, EV and RV series actuators to select Flanged globe valves requiring larger stem travels and higher forces. Its casted base and lower locking clamp allow the FGVL to be mounted on 2-1/2" to 6" two-way or three-way valves in both normally open and normally closed configurations.


Operation

The FGVL linkage with actuator will provide up to 2" [50 mm] of linear travel to accommodate a wide range of valve sizes.


Default/Configuration

The default set up for a FGVL linkage will be factory installed along with an AVK or EV, RV series actuator. Included in the kit will be all the necessary hardware to facilitate mounting to the valve.

Suitable Actuators			
	Non-Spring	Electronic Fail-Safe	
FGVL	EVB(X), RVB(X)	AVKB(X)	
FGVL	EVB(X), RVB(X)	AVKB(X)	

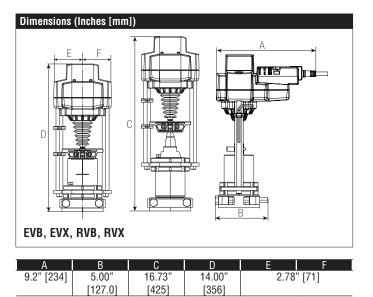



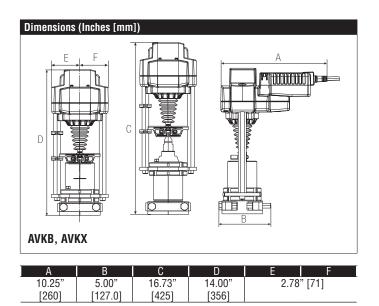





Technical Data	
Power Supply	24 VAC ± 20%, 50/60 Hz
Power Consumption Running	5 W
Power Consumption Holding	2 W
Transformer Sizing	9.5 VA (class 2 power source)
Electrical Connection	3 ft, 18 GA plenum rated cable with 1/2"
	conduit connector protected NEMA 2 (IP54)
Overload Protection	electronic throughout full stroke
Electrical Protection	actuators are double insulated
Operating Range Y	on/off, floating point
Input Impedance	100 k Ω (0.1 mA), 500 $\Omega,$ 1000 Ω (on/off)
Feedback Output U	No Feedback
Stroke	1.25" [32 mm]
Linear Force	450 lbf [2000 N force]
Direction of Rotation (Motor)	reversible with switch
Direction of Rotation (Fail-Safe)	reversible with switch
Position Indication	stroke indicator on bracket
Manual Override	5 mm hex crank (3/16" Allen), supplied
Running Time (Motor)	90 sec (default), Optional (90 or 150 sec)
Running Time (Fail-Safe)	35 sec
Bridge Time	2 sec delay before fail-safe activates
Pre-charging Time	5 to 20 seconds
Humidity	5 to 95% RH non-condensing
Ambient Temperature Range	-22°F to +122°F [-30°C to +50°C]
Storage Temperature Range	-40°F to +176°F [-40°C TO +80°C]
Housing	NEMA 2, IP54, UL enclosure type 2
Housing Material	Aluminum die cast and plastic casing
Agency Listings†	cULus acc. to UL60730-1A/-2-14, CAN/CSA
	E60730-1:02, CE acc. to 2004/108/EC and
	2006/95/EC
Noise Level (Motor)	<60 dB (A)
Noise Level (Fail-Safe)	<60 dB (A)
Servicing	maintenance free
Quality Standard	ISO 9001
Weight	6.4 lb [2.9 kg]

† Use flexible metal conduit. Push the listed conduit fitting device over the actuator's cable to butt against the enclosure. Screw in conduit connector. Jacket the actuators input wiring with listed flexible conduit. Properly terminate the conduit in a suitable junction box. Rated impulse Voltage 800V. Type of action 1. Control pollution degree 3.



Wiring Diagrams

🔀 INSTALLATION NOTES

Meets cULus requirements without the need of an electrical ground connection.

Provide overload protection and disconnect as required.



Actuators may be connected in parallel. Power consumption and input impedance must be observed.


Control signal may be pulsed from either the Hot (Source) or Common (Sink) 24 VAC line.

Actuators may be connected in parallel if not mechanically linked. Power consumption and input impedance must be observed.

Actuators with plenum cable do not have numbers; use color codes instead.

WARNING! LIVE ELECTRICAL COMPONENTS!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

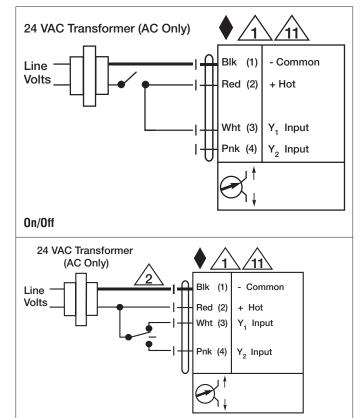

Floating Point