

AS Series Simplex and AD Series Duplex

Lubricated Climate Control Air Compressors



Simplex 1 hp with Air Dryer

Description

The AS Series Simplex and AD Series Duplex Air Compressors are designed and factory tested to meet the most demanding specifications for low oil carryover and long life in the climate control industry.

Features

- receiver tank is ASME coded and also meets the requirements of California Ordinance 462 (L) (2)
- an ASME safety relief valve set and sealed at 115 psig is included



Duplex 3hp with Deluxe Alternator

- calibrated pressure electric switches provide automatic cut-in and cut-out
- an unloading feature provides loadless starting
- an auxiliary, crankshaft-driven fan and air control shroud are designed to achieve low head temperatures and minimal oil carryover
- duplex units consist of two equally rated motor compressor assemblies mounted on a single receiver tank

 an available alternator assembly on duplex models alternates compressor use, and automatically provides a second unit for standby or extra demand. A deluxe alternator offers individual operation of either compressor, if desired, and provides for field modification of operating voltage.

Accessories

- Included:
 - vibration mounting pads
 - crankcase filled with Johnson Controls
 F-1000-383 compressor oil
 - intake filter-silencers on all models
- · Not included:
 - manual power supply disconnect switch
- Optional
 - factory mounted Johnson Controls
 A-4412-1 Air Dryer with air purification system available on 1/2 through
 3 hp models
 - refer to the selection chart for additional options

To Order

Specify the code number from the following selection chart.

Specifications

| AS Series | AS Series Simplex and AD Series Duplex Lubricated Climate Control Air Compressors Performance | | | | | | | | | | |
|------------------------------------|---|--------------------|----------------------|---------------------|-----------------------------|--|--|--|--|--|--|
| Base Model | Motor hp | Compre | essor rpm | Compressor C | apacity acfm ^(a) | | | | | | |
| AS and AD - 105 AS and AD - 005 | 1/2 | 3 | 305 | 5 1.8 | | | | | | | |
| AS and AD - 107 AS and AD - 007 | 3/4 | 1 | 1000 | | 2.5 | | | | | | |
| AS and AD - 110 AS and AD - 010 | 1 | 675 ^(b) | 745 ^(c) | 3.7 ^(b) | 4.1 ^(c) | | | | | | |
| AS and AD - 015 | 1-1/2 | 990 ^(b) | 1,055 ^(c) | 5.2 ^(b) | 5.9 ^(c) | | | | | | |
| AS and AD - 020 | 2 | 740 ^(b) | 795 ^(c) | 8.2 ^(b) | 9.0 ^(c) | | | | | | |
| AS and AD - 030 | 3 | 850 ^(d) | 775 ^(e) | 12.0 ^(d) | 13.2 ^(e) | | | | | | |
| AS and AD - 050 | 5 | 660 ^(f) | 685 ^(g) | 22.0 ^(f) | 24.2 ^(g) | | | | | | |
| AS and AD - 075 | 7-1/2 | 965 ^(f) | 810 ^(g) | 31.5 ^(f) | 34.6 ^(g) | | | | | | |
| AS and AD - 100 | 10 | 800 ^(h) | 710 ⁽ⁱ⁾ | 39.0 ^(h) | 42.5 ⁽ⁱ⁾ | | | | | | |

(a) Actual cubic feet per minute from one pump at 100% runtime at 80 psig (560 kPa), with clean inlet air filter installed.

(b) Models Prior to 6/1/98 (c) Models After 6/1/98

(d) Models Prior to 9/15/98(e) Models After 9/15/98


(f) Models Prior to 7/20/98(g) Models After 7/20/98

(h) Models Prior to 2/28/99(i) Models After 2/28/99


Note: De-rate the values listed above by 3% for every 1000 feet above sea level.





Selection Chart

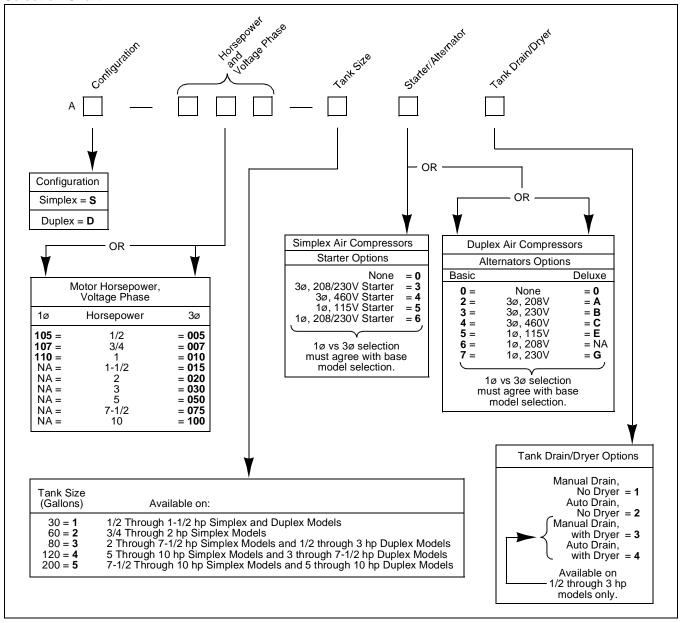



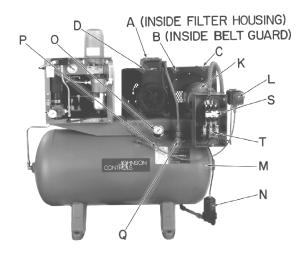

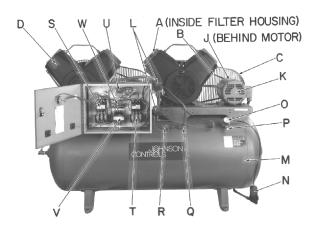

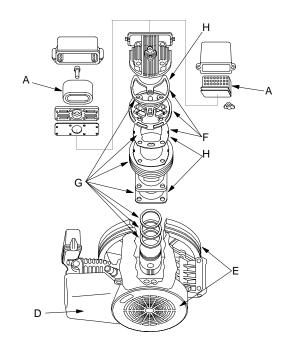

Repair Parts

| Code Number Call- out | | | Description | Qty. of Kits Req'd per Pump | |
|---------------------------|-----------------------------|---|---|--------------------------------|------------------|
| | | | Intake Filter Element Kits: Motor Horsepower | | |
| A-005-6023 | | | 1/2 | | 1 |
| A-010-6023 ^(a) | A-005-6023 ^(b) | | 3/4 | | 1 |
| A-010-6023 ^(c) | A-010-6023NP (d) | Α | 1, 1-1/2 | | 1 |
| A-010-6023 ^(c) | A-030-6023NP (d) | ^ | 2 | 2 ^(c) | 1 ^(d) |
| A-030-6023 ^(e) | A-030-6023NP (f) | | 3 | 2 ^(e) | 1 ^(f) |
| A-075-6005 ^(g) | A-030-6023NP (h) | | 5, 7-1/2 | 2 | 2 |
| A-075-6005 ⁽ⁱ⁾ | A-030-6023NP ^(j) | | 10 | ; | 3 |
| A-200-6005 | | | 15, 20 | : | 2 |

- (a) Models Prior to 8/1/90
- (c) Models Prior to 6/1/98
- (e) Models Prior to 9/15/98(f) Models After 9/15/98
- (g) Models Prior to 7/20/98
- (i) Models Prior to 2/28/99

- (b) Models After 8/1/90
- (d) Models After 6/1/98

- (h) Models After 7/20/98
- (j) Models After 2/28/99



Repair Parts (Continued)

| Code N | umber | Call- out | Description | Description | | | | |
|---------------------------|-----------------------------|--------------|--|---------------------|---------------------|----------|--|--|
| | | | Drive Belt Kits | | | | | |
| | | | Motor Horsepower | Size | | | | |
| A-005-6006 | | | 1/2 | A-4 | 2 | 1 | | |
| A-010-6006 ^(a) | A-005-6006 ^(b) | | 3/4 | A-43 ^(a) | A-42 (b) | 1 | | |
| A-010-6006 | | | 1 | A-4 | 3 | 1 | | |
| A-015-6006 ^(c) | A-015-6006NP ^(d) | | 1-1/2 | A-45 ^(c) | A-46 ^(d) | 1 | | |
| A-020-6006 ^(c) | A-020-6006NP ^(d) | | 2 | A-61 ^(c) | A-65 ^(d) | 1 | | |
| A-030-6006 ^(e) | A-030-6006NP ^(f) | В | 3 | A-6 | 2 | 1 | | |
| A-050-6006 ^(g) | A-050-6006NP ^(h) | | 5 (80 and 120 Gallon Tank) | A-6 | 5 | 2 | | |
| A-075-6046 ^(g) | A-075-6046NP ^(h) | | 7-1/2 (80 and 120 Gallon Tank) | A-6 | 7 | 2 | | |
| A-075-6056 ^(g) | A-075-6056NP (h) | | 7-1/2 (200 Gallon Tank) | A-7 | 5 | 2 | | |
| A-100-6006 ⁽ⁱ⁾ | A-100-6006NP ^(j) | | 10 | A-80 ⁽ⁱ⁾ | A-84 ^(j) | 2 | | |
| A-150-6006 | | | 15 | B-9 | 2 | 2 | | |
| A-200-6006 | | | 20 | B-9 | 6 | 2 | | |
| | | | Belt Guard Kits: Includes belt guard, belt guard support (3/4 through 1-1/2 hp models only), and belt guard brack Motor Horsepower | | | | | |
| A-010-6012 | | | 1/2 | 30 and 80 Gallon | ı | 1 | | |
| A-010-6012 | | | 3/4 | 30, 60, and 80 G | allon | 1 | | |
| A-010-6012 | | | 1 | 30, 60, and 80 G | allon | 1 | | |
| A-010-6012 | | С | 1-1/2 | 30, 60, and 80 G | | 1 | | |
| A-020-6012 | | | 2 | 60 and 80 Gallon | | 1 | | |
| A-020-6012 | | | 3 | 80 and 120 Gallo | | 1 | | |
| A-050-6012 A-100-6012 | | | <u>5</u> 5 | 80 and 120 Gallo | n | 1 | | |
| A-050-6012 | | | 7-1/2 | 80 and 120 Gallo | ın | 1 | | |
| A-100-6012 | | | 7-1/2 | 200 Gallon | *** | 1 | | |
| A-100-6012 | | | 10 | 120 and 200 Gal | on | 1 | | |
| | | | Cooling Fan Shroud Kits: | | | | | |
| | | | Motor Horsepower | | | | | |
| A-005-6013 | | | 1/2 | | | 1 | | |
| A-010-6013 ^(a) | A-005-6013 ^(b) | | 3/4 | | | 1 | | |
| A-010-6013 ^(c) | N/A ^(d) | | 1, 1-1/2 | | | 1 | | |
| | A-020-6013NP (d) | D | 2 | | | 1 | | |
| | A-030-6013NP ^(f) | | 3 | | | 1 | | |
| A-050-6013 ^(g) | | | 5 | | | 1 | | |
| | | | 7-1/2 | | | 1 | | |
| | A-100-6013NP ^(j) | | 10 | | | 1 | | |
| A-100-0013 V | A-100-0013NF W | | 10 | | | <u> </u> | | |

(a) Models Prior to 8/1/90

(c) Models Prior to 6/1/98

(e) Models Prior to 9/15/98

(g) Models Prior to 7/20/98

(i) Models Prior to 2/28/99

(b) Models After 8/1/90

(d) Models After 6/1/98

(f) Models After 9/15/98

(h) Models After 7/20/98

(j) Models After 2/28/99



| Code N | lumber | Call- out | Description | Qty. of Kits Req'd per Pump |
|---------------------------|-----------------------------|--------------|---|--------------------------------|
| | | | Pump and Flywheel Kits: | |
| | | | Motor Horsepower | |
| A-005-6001 | | | 1/2 | 1 |
| A-010-6001 ^(a) | A-005-6001 ^(b) | | 3/4 | 1 |
| A-010-6001NP | | Е | 1, 1-1/2 | 1 |
| A-020-6001NP | | | 2 | 1 |
| A-030-6001NP | | | 3 | 1 |
| A-050-6001NP | | | 5 | 1 |
| A-075-6001NP | | | 7-1/2 | 1 |
| A-100-6001NP | | | 10 | 1 |
| | | | Valve Plate Kits: Includes one head gasket, one valve plate, and one valve spacer. | |
| 4 005 0000 | | | Motor Horsepower | |
| A-005-6002 | (6) | | 1/2 | 1 |
| A-010-6002 ^(a) | A-005-6002 ^(b) | | 3/4 | 1 |
| A-010-6002 ^(c) | A-010-6002NP ^(d) | F | 1, 1-1/2 | 1 |
| A-020-6002 ^(c) | A-020-6002NP ^(d) | | 2 | 2 |
| A-030-6002 ^(e) | A-030-6002NP ^(f) | | 3 | 2 |
| A-075-6002 ^(g) | A-050-6002NP ^(h) | | 5 | 2 |
| A-075-6002 ^(g) | A-075-6002NP (h) | | 7-1/2 | 2 |
| A-075-6002 ⁽ⁱ⁾ | A-075-6002NP ^(j) | | 10 | 3 |
| | | | Cylinder and Ring Kits: Includes one cylinder, two compression rings, one oil control ring, one head gasket, one valve spacer, and one cylinder gasket. | |
| | | | Motor Horsepower | |
| A-005-6004 | | | 1/2 | 1 |
| A-010-6004 ^(a) | A-005-6004 ^(b) | | 3/4 | 1 |
| A-010-6004 ^(c) | A-010-6004NP (d) | G | 1, 1-1/2 | 1 |
| A-020-6004 ^(c) | A-020-6004NP (d) | G | 2 | 2 |
| A-030-6004 ^(e) | A-030-6004NP ^(f) | | 3 | 2 |
| A-075-6004 ^(g) | A-050-6004NP ^(h) | | 5 | 2 |
| A-075-6004 ^(g) | A-075-6004NP ^(h) | | 7-1/2 | 2 |
| A-075-6004 ⁽ⁱ⁾ | A-075-6004NP ^(j) | | 10 | 2 or 3 |

| (a) Models Prior to 8/1/90 | (c) Models Prior to 6/1/98 | (e) Models Prior to 9/15/98 | (g) Models Prior to 7/20/98 | (i) Models Prior to 2/28/99 |
|----------------------------|----------------------------|-----------------------------|-----------------------------|-----------------------------|
| (b) Models After 8/1/90 | (d) Models After 6/1/98 | (f) Models After 9/15/98 | (h) Models After 7/20/98 | (j) Models After 2/28/99 |



Repair Parts (Continued)

| Code N | lumber | Call- out | | | Description | | Qty. of Kits Req'd per Pump |
|--|---|--------------|--------------------|------------------|--------------------------------|---|---|
| A-005-6003 ^(k) A-010-6003 ^(a) ^(k) | A-005-6003 ^(b) ^(k) | | Spare G gasket. | Motor Horsepow | | lve spacer, and one cylinder | 1 |
| A-010-6003 (k) | A-005-6003 (*/ (/ | Н | | 1, 1-1/2 | | | 1 |
| A-020-6003 ^(k) | | | | 2 | | | 1 |
| A-030-6003 ^(k) | | | | 3 | | | 1 |
| A-050-6003 ^(k) | | | | 5, 7-1/2 | | | 1 |
| A-100-6003 ^(k) | | | | 10 | | | 1 |
| | | | Motor P | ulley Kits: | | | |
| | | | | Motor hp | Туре | | |
| A-005-6007 | | | | 1/2 | 1A-4.4 in. P.D., 5/8 in. Bore | | 1 |
| A-007-6007 ^(a) | A-007-6037 ^(b) | | | 3/4 | 1A-3.2 in. P.D., 5/8 in. Bore | (a) 1A-5.8 in. P.D., 5/8 in. Bore (b) | 1 |
| A-110-6007 | | | | 1 (Single-Phase) | 1A-4.0 in. P.D., 5/8 in. Bore | 1A-4.0 in. P.D., 5/8 in. Bore | |
| A-010-6007 | | | | 1 (Three-Phase) | 1A-4.0 in. P.D., 7/8 in. Bore | | 1 |
| A-015-6007 | | J | | 1-1/2 | 1A-6.0 in. P.D., 7/8 in. Bore | | 1 |
| A-020-6007 | | | | 2 | 1A-5.5 in. P.D., 7/8 in. Bore | | 1 |
| A-030-6007 ^(e) | A-030-6007NP ^(f) | | | 3 | 1A-6.2 in. P.D., 1-1/8 in. Bor | e ^(e) 1A-6.0 in. P.D., 1-1/8 in. Bore ^(f) | 1 |
| A-050-6007 ^(g) | A-050-6007NP (h) | | | 5 | 2A-5.6 in. P.D., 1-1/8 in. Bor | e | 1 |
| A-075-6007 ^(g) | A-075-6007NP (h) | | | 7-1/2 | 2A-8.2 in. P.D., 1-3/8 in. Bor | 1 | |
| A-100-6007 ⁽ⁱ⁾ | A-100-6007NP ^(j) | | | 10 | 2A-7.6 in. P.D., 1-5/8 in. Bor | e e | 1 |
| | | | | Motor hp | Motor Phase | Motor Voltage | (I) Purchase Locally for All Models: |
| Century C320 | | | | 1/2 | Single | 115-208/230 | 1 |
| Century H273 | | | | 1/2 | Three | 208-230/460 | 1 |
| Century C323 | | | | 3/4 | Single | 115-208/230 | 1 |
| Century H581 | | | | | Three | 208-230/460 | 1 |
| Century ^(m) C774 | | | | 1 | Single | 115-208/230 | 1 |
| Century ^(m) H614 or Baldor M3116T Century ^(m) R146 or Baldor M3154T Century ^(m) R147 or Baldor M3157T | | K | Motors | | Three | 208-230/460 | 1 |
| | | | | 1-1/2 | Three | 208-230/460 | 1 |
| | | | | 2 | Three | 208-230/460 | 1 |
| Century ^(m) R206 or Baldor M3211T | | 1 | | 3 | Three | 208-230/460 | 1 |
| Century (m) R207 | tury ^(m) R207 or Baldor M3218T | | Three | 208-230/460 | 1 | | |
| Century (m) R308 | | | Three | 208-230/460 | 1 | | |
| Century (m) R309 | or Baldor M3313T | | | 10 | Three | 208-230/460 | 1 |

(a) Models Prior to 8/1/90(b) Models After 8/1/90

(c) Models Prior to 6/1/98(d) Models After 6/1/98

(e) Models Prior to 9/15/98(f) Models After 9/15/98

(g) Models Prior to 7/20/98(h) Models After 7/20/98

(i) Models Prior to 2/28/99(j) Models After 2/28/99

⁽k) Repair requires liquid sealant (A-999-6000 for crankcase to cylinder only).

⁽I) For motor warranty service, contact the local authorized motor service center.

⁽m)One through ten horsepower air compressors shipped after 6/1/92 are equipped with Baldor motors.



| Code | Number | Call- out | Descript | Qty. of Kits Req'd per Pump | | | | |
|---------------------------|-----------------------------|--------------|---|---|------------------------|---|--|--|
| | | | Pressure Electric (PE) Switch Kits: For all hors | | | | | |
| A-100-6010 | | L | | Lead Switch: Factory set at approximately 70 psig (490 kPa) cut-in and 90 psig (630 kPa) cut-out. | | | | |
| A-100-6011 | | | Lag Switch: Factory set at approximat 80 psig (560 kPa) cut-out. | ely 60 psig (420 kPa) cut-ir | and | _ | | |
| | | | Receiver Tanks: | | | | | |
| | | | Motor Horsepower | Tank Size | Ship Weight lb (kg) | | | |
| A-010-6030 ⁽ⁿ⁾ | | | 1/2, 3/4 | | 404.0 | | | |
| A-010-6030 (c) (n) | A-010-6030NP (d) (n) | | 1, 1-1/2 | 30 Gallon | 134.0 (60.78) | _ | | |
| A-010-6060 | • | | 1/2, 3/4 | 60.0-11 | 175.0 | | | |
| A-010-6060 ^(c) | A-010-6060NP (d) | | 1, 1-1/2 | 60 Gallon | (79.38) | _ | | |
| A-020-6060 ^(c) | A-020-6060NP (d) | | 2 | 60 Gallon | 184.0 | | | |
| A-020-6060 ^(e) | A-020-6060NP ^(f) | | 3 | 60 Gallon | (83.46) | _ | | |
| A-010-6080 ⁽ⁿ⁾ | • | | 1/2, 3/4 | | 005.0 | | | |
| A-010-6080 (c) (n) | A-010-6080NP (d) (n) | М | 1, 1-1/2 | 80 Gallon | 235.0 (106.59) | _ | | |
| A-020-6080 (c) (n) | A-020-6080NP (d) (n) | | 2 | 20 Callen | 243.0 | | | |
| A-020-6080 (e) (n) | A-020-6080NP (f) (n) | | 3 | 80 Gallon | (110.22) | _ | | |
| A-020-6120 (c) (n) | A-020-6120NP (d) (n) | | 2 | 120 Gallon | 398.0 | | | |
| A-020-6120 (e) (n) | A-020-6120NP (f) (n) | | 3 | 120 Gallott | (180.53) | _ | | |
| A-050-6120 (g) (n) | A-050-6120NP (h) (n) | | 5, 7-1/2 | 120 Gallon | 415.0 (188.24) | _ | | |
| A-100-6200 (g) (n) | A-100-6200NP (h) (n) | | 5, 7-1/2 | 200 Gallon | 677.0 | _ | | |
| A-100-6200 (i) (n) | A-100-6200NP (j) (n) | | 10 | 200 Gallott | (307.08) | | | |
| | | | Receiver Tank Drain Kits: | | | | | |
| Purchase Locall | у | N | Manual Tank Drain, 1/4 in. Internal NPT | | | _ | | |
| A-100-6021 | | | Automatic Tank Drain | | | _ | | |
| G-2010-24 | | | | | | _ | | |
| A 050 0000 | | _ | Safety Relief Valve Kits: Factory Set at approx | , , , , , | 1). | | | |
| A-050-6009 A-200-6009 | | Р | 1/2 through 5 hp Models (1/4 in. external 7-1/2 and 10 hp Models (1/4 in. external | | | _ | | |
| A-200-0009 | | | ' ' | INF I) | | _ | | |
| A 040 C000 | | | Check Valve Kits: | Size | | | | |
| | | Q | ' | 1 | | | | |
| A-010-6008 A-075-6008 | | 1 | 1/2 through 3 1/2 in. External NPT x 1/2 in. Internal NPT | | | 1 | | |
| A-100-6020 | | R | 5 through 10 3/4 in. External NPT x 3/4 in. Internal NPT Shuttle Valve Kit: Includes one shuttle valve, three flare fittings, and three nuts. | | | _ | | |

| (a) Models Prior to 8/1/90 | (c) Models Prior to 6/1/98 | (e) Models Prior to 9/15/98 | (g) Models Prior to 7/20/98 | (i) Models Prior to 2/28/99 |
|----------------------------|----------------------------|-----------------------------|-----------------------------|-----------------------------|
| (b) Models After 8/1/90 | (d) Models After 6/1/98 | (f) Models After 9/15/98 | (h) Models After 7/20/98 | (j) Models After 2/28/99 |

⁽n) This replacement tank will include mounting hardware for a second pump since the same tank is used for simplex and duplex air compressors.



| Code Number | Call- out | | | | Qty. of Kits Req'd per Pump | | | | |
|-------------|--------------|-------------|---|------------------------------|--------------------------------|------------------|-----------|---|--|
| | | | Starter Assembly Kits: Includes starter assembly and starter assembly enclosure (enclosure is not included with starter assemblies having a 115 volt coil). | | | | | | |
| | | Motor hp | Air Compres- sor Type | Electrical Equipment | Motor Phase | Motor Voltage | Enclosure | | |
| A-101-6014 | | | | | Single | 115 | No | 1 | |
| A-102-6014 | | | | | | 230 | Yes | 1 | |
| A-302-6014 | | | Simplex | Starter Only | | 208 | Yes | 1 | |
| A-302-6014 | | | | O.I.I.y | Three | 230 | Yes | 1 | |
| A-303-6014 | | | | | | 460 | Yes | 1 | |
| A-101-6014 | | | Duplex | | Cinala | 115 | No | 1 | |
| A-102-6014 | | | | Basic Alternator Package | Single | 230 | Yes | 1 | |
| A-302-6014 | | 1/2 | | | Three | 208 | Yes | 1 | |
| A-302-6014 | | | | | | 230 | Yes | 1 | |
| A-303-6014 | | | | | | 460 | Yes | 1 | |
| A-101-6014 | | | | Duplex Alternator Package | Single | 115 | No | 1 | |
| A-101-6014 | | | | | | 230 | No | 1 | |
| A-306-6014 | | | | | | 208 | No | 1 | |
| A-306-6014 | s | | | l ackage | Three | 230 | No | 1 | |
| A-306-6014 | | | | | | 460 | No | 1 | |
| A-101-6014 | | | Simplex | Starter Only | Single | 115 | No | 1 | |
| A-102-6014 | | | | | | 230 | Yes | 1 | |
| A-302-6014 | | | | | | 208 | Yes | 1 | |
| A-302-6014 | | | | | Three | 230 | Yes | 1 | |
| A-303-6014 | | | | | | 460 | Yes | 1 | |
| A-101-6014 | | | | | 0:! | 115 | No | 1 | |
| A-102-6014 | | | | | Single | 230 | Yes | 1 | |
| A-302-6014 | | 3/4 | Duplex | Basic Alternator Package | | 208 | Yes | 1 | |
| A-302-6014 | | | | I dokago | Three | 230 | Yes | 1 | |
| A-303-6014 | | | | | | 460 | Yes | 1 | |
| A-101-6014 | | | | | 0: | 115 | No | 1 | |
| A-101-6014 | | | | | Single | 230 | No | 1 | |
| A-306-6014 | | | Duplex | Deluxe Alternator | Three | 208 | No | 1 | |
| A-306-6014 | | | | Package | | 230 | No | 1 | |
| A-306-6014 | | | | | | 460 | No | 1 | |



| Code Number | Call- out | | | Descri | ption | | | Qty. of Kits Req'd per Pump |
|-------------|--------------|-----------------------------------|--------------------------|------------------------------|----------------|------------------|-----------|--------------------------------|
| | | Starter Assembly Kits (Continued) | | | | | | |
| | | Motor hp | Air Compres- sor Type | Electrical Equipment | Motor Phase | Motor Voltage | Enclosure | |
| A-101-6014 | 7 | | | | Cinala | 115 | No | 1 |
| A-102-6014 | 7 | | | | Single | 230 | Yes | 1 |
| A-302-6014 | 7 | | Simplex | Starter Only | | 208 | Yes | 1 |
| A-302-6014 | 7 | | | Offiny | Three | 230 | Yes | 1 |
| A-303-6014 | 7 | | | | | 460 | Yes | 1 |
| A-101-6014 | 1 | | | | 0: 1 | 115 | No | 1 |
| A-102-6014 | 1 | | | | Single | 230 | Yes | 1 |
| A-302-6014 | 1 | 1 | Duplex | Basic Alternator Package | | 208 | Yes | 1 |
| A-302-6014 | 1 | | | r ackage | Three | 230 | Yes | 1 |
| A-303-6014 | 1 | | | | | 460 | Yes | 1 |
| A-101-6014 | | | | Deluxe Alternator Package | Single | 115 | No | 1 |
| A-101-6014 | | | | | | 230 | No | 1 |
| A-306-6014 | | | | | Three | 208 | No | 1 |
| A-306-6014 | 1 | | | | | 230 | No | 1 |
| A-306-6014 | s | | | | | 460 | No | 1 |
| A-302-6014 | 1 | | | | | 208 | Yes | 1 |
| A-302-6014 | 1 | | Simplex | Starter Only | Three | 230 | Yes | 1 |
| A-303-6014 | 1 | | | | | 460 | Yes | 1 |
| A-302-6014 | 1 | | | Basic Alternator Package | Three | 208 | Yes | 1 |
| A-302-6014 | 1 | 1-1/2 | | | | 230 | Yes | 1 |
| A-303-6014 | 1 | | | | | 460 | Yes | 1 |
| A-306-6014 | 1 | | Duplex | | | 208 | No | 1 |
| A-306-6014 | 7 | | | Deluxe Alternator Package | Three | 230 | No | 1 |
| A-306-6014 | 7 | | | I ackage | | 460 | No | 1 |
| A-302-6014 | 1 | | | | | 208 | Yes | 1 |
| A-302-6014 | 7 | | Simplex | Starter Only | Three | 230 | Yes | 1 |
| A-303-6014 | 1 | | | Cilly | | 460 | Yes | 1 |
| A-302-6014 | 1 | | | | | 208 | Yes | 1 |
| A-302-6014 | 1 | 2 | | Basic Alternator Package | Three | 230 | Yes | 1 |
| A-303-6014 | 1 | | D | I ackage | | 460 | Yes | 1 |
| A-306-6014 | 1 | | Duplex | | Three | 208 | No | 1 |
| A-306-6014 | 1 | | | Deluxe Alternator | | 230 | No | 1 |
| A-306-6014 | 1 | | | Package | | 460 | No | 1 |



| Code Number | Call- out | | | | Qty. of Kits Req'd per Pump | | | |
|-------------|--------------|-------------|-----------------------------------|--|--------------------------------|------------------|-----------|---|
| | | Starter | Starter Assembly Kits (Continued) | | | | | |
| | | Motor hp | Air Compres- sor Type | Electrical Equipment | Motor Phase | Motor Voltage | Enclosure | |
| A-302-6014 | 1 | | | | | 208 | Yes | 1 |
| A-302-6014 | | | Simplex | Starter Only | Three | 230 | Yes | 1 |
| A-303-6014 | | | | , | | 460 | Yes | 1 |
| A-302-6014 | | | | D : All . | | 208 | Yes | 1 |
| A-302-6014 | | 3 | | Basic Alternator Package | Three | 230 | Yes | 1 |
| A-303-6014 | | | Duploy | , demage | | 460 | Yes | 1 |
| A-306-6014 | 1 | | Duplex | | | 208 | No | 1 |
| A-306-6014 | 1 | | | Deluxe Alternator Package | Three | 230 | No | 1 |
| A-306-6014 | 7 | | | T dokage | | 460 | No | 1 |
| A-302-6014 | 1 | | | | | 208 | Yes | 1 |
| A-302-6014 | 7 | | Simplex | Starter Only | Three | 230 | Yes | 1 |
| A-303-6014 | 1 | | | | | 460 | Yes | 1 |
| A-302-6014 | 7 | | Duplex | Basic Alternator Package Deluxe Alternator Package | | 208 | Yes | 1 |
| A-302-6014 | 1 | 5 | | | Three | 230 | Yes | 1 |
| A-303-6014 | 7 | | | | | 460 | Yes | 1 |
| A-306-6014 | 7 | | Duplex | | Three | 208 | No | 1 |
| A-306-6014 | s | | | | | 230 | No | 1 |
| A-306-6014 | 1 | | | l ackage | | 460 | No | 1 |
| A-305-6014 | 1 | | Simplex | Starter Only | Three | 208 | Yes | 1 |
| A-305-6014 | 7 | | | | | 230 | Yes | 1 |
| A-303-6014 | 1 | | | | | 460 | Yes | 1 |
| A-305-6014 | 1 | | | | Three | 208 | Yes | 1 |
| A-305-6014 | 1 | 7-1/2 | | Basic Alternator Package | | 230 | Yes | 1 |
| A-303-6014 | 1 | | Demolect | l ackage | | 460 | Yes | 1 |
| A-307-6014 | 7 | | Duplex | | | 208 | No | 1 |
| A-307-6014 | 7 | | | Deluxe Alternator Package | Three | 230 | No | 1 |
| A-306-6014 | 7 | | | . aonago | | 460 | No | 1 |
| A-305-6014 | 1 | | | | | 208 | Yes | 1 |
| A-305-6014 | 1 | | Simplex | Starter Only | Three | 230 | Yes | 1 |
| A-304-6014 | 1 | | | Ciny | | 460 | Yes | 1 |
| A-305-6014 | 1 | | | | | 208 | Yes | 1 |
| A-305-6014 | 1 | 10 | | Basic Alternator Package | Three | 230 | Yes | 1 |
| A-304-6014 | 1 | | Dla | I ackaye | | 460 | Yes | 1 |
| A-308-6014 | 1 | | Duplex | Deluxe Alternator | | 208 | No | 1 |
| A-308-6014 | 1 | | | | Three | 230 | No | 1 |
| A-307-6014 | 1 | | | Package | | 460 | No | 1 |



| Code Number | Call- out | l Description | | | | | | | |
|-------------|--------------|---|----------------------------|----------------|------------------|---|--|--|--|
| | | Thermal Overload Kits: Includes one the three thermal overloads for three-phase | | | | | | | |
| | | Motor Horsepower | Motor Manufac- turer | Motor Phase | Motor Voltage | | | | |
| A-121-6016 | | | | 6: 1 | 115 | 1 | | | |
| A-114-6016 | | 4/0 | 0 | Single | 208/230 | 1 | | | |
| A-308-6016 | | 1/2 | Century | Th | 208/230 | 1 | | | |
| A-303-6016 | | | | Three | 460 | 1 | | | |
| A-125-6016 | | | | Circ rete | 115 | 1 | | | |
| A-117-6016 | | 0,4 | | Single | 208/230 | 1 | | | |
| A-310-6016 | | 3/4 | Century | | 208/230 | 1 | | | |
| A-305-6016 | | | | Three | 460 | 1 | | | |
| A-125-6016 | | | Century | | 115 | 1 | | | |
| A-117-6016 | | | and Baldor | Single | 208/230 | 1 | | | |
| A-313-6016 | | 1 | Century | Three | 208/230 | 1 | | | |
| A-312-6016 | | l ' | Baldor | Three | 208/230 | 1 | | | |
| A-306-6016 | | | Century and Baldor | Three | 460 | 1 | | | |
| A-317-6016 | | | Century | Three | 208/230 | 1 | | | |
| A-315-6016 | Т | 1-1/2 | Baldor | Three | 208/230 | 1 | | | |
| A-309-6016 | | | Century and Baldor | Three | 460 | 1 | | | |
| A-319-6016 | | | Century | Three | 208/230 | 1 | | | |
| A-318-6016 | | | Baldor | Three | 208/230 | 1 | | | |
| A-312-6016 | | 2 | Century and Baldor | Three | 460 | 1 | | | |
| A-324-6016 | | | Century | Three | 208/230 | 1 | | | |
| A-321-6016 | | 3 | Baldor | Three | 208/230 | 1 | | | |
| A-316-6016 | |] | Century | Three | 460 | 1 | | | |
| A-314-6016 | | | Baldor | Three | 460 | 1 | | | |
| A-327-6016 | | | Century | Three | 208/230 | 1 | | | |
| A-326-6016 | | _ | Baldor | Three | 208/230 | 1 | | | |
| A-320-6016 | | 5 | Century | Three | 460 | 1 | | | |
| A-319-6016 | | | Baldor | Three | 460 | 1 | | | |
| A-330-6016 | | | Century | | 208/230 | 1 | | | |
| A-324-6016 | | 7-1/2 | and Baldor | Three | 460 | 1 | | | |
| A-331-6016 | | | Century | | 208/230 | 1 | | | |
| A-326-6016 | | 10 | and Baldor | Three | 460 | 1 | | | |



| Code Number | Call- out | Description Alternator Relay Kits: Includes relay enclosure where noted. | | | | | Qty. of Kits Req'd per Pump |
|-------------|--------------|--|---|------------------|----------------------------|-----------|--------------------------------|
| | | | | | | | |
| | | Motor Horsepower | Alternator Package | Motor Voltage | Alternator Coil Voltage | Enclosure | |
| A-105-6017 | U | 1/2 Through 10 | Basic | 115 | 208 | No | _ |
| A-106-6017 | | | | 208 | 208 | Yes | _ |
| A-107-6017 | | | | 230 | 230 | Yes | _ |
| A-105-6017 | | | | 460 | 460 | Yes | _ |
| A-105-6017 | | | Deluxe | 115 | 115 | No | _ |
| A-105-6017 | | | | 208 | 115 | No | _ |
| A-105-6017 | | | | 230 | 115 | No | _ |
| A-105-6017 | | | | 460 | 115 | No | _ |
| A-100-6018 | V | Control Transformer Kit: 2 | 208/230/460 — 115V | | | | _ |
| A-100-6019 | W | Fuse Kit: Includes three 0.8 amp fuses. | | | | _ | |
| | | Oil Level Sight Glass Kits (Not Shown): Includes sight glass and O-ring. | | | | | |
| A-005-6022 | _ | For 1/2 through | For 1/2 through 1 1/2 horsepower models | | | | 1 |
| A-020-6022 | | For 2 through 10 horsepower models | | | | 1 | |
| A-1000-267 | _ | Wire and Terminal Marker Kit (Not Shown) | | | | | _ |
| | | Oil Indicator (Not Shown): | | | | | |
| A-4000-120 | | Indicator and Needle Valve Assembly (Not Shown) | | | | _ | |
| A-4000-121 | | Indicator Replacement Cartridge (Not Shown) | | | | | _ |
| F-1000-383 | _ | Johnson Controls Air Compressor Oil (Not Shown): 1 quart bottle; for a full case, order 12 bottles. | | | | | _ |
| A-999-100 | _ | Touch-Up Paint (Not Shown): gray; 12 oz spray can. | | | | | _ |
| | | Intake Silencers (Not Shown): | | | | | |
| | | Motor Horsepower | | | | | |
| A-050-100 | | 5, 7-1/2 | | | | 1 | |
| A-100-100 | | 10 | | | | | 1 |
| | | Vibration/Isolation Pad Kits ^(o) (Not Shown): Includes four pads per kit. | | | | | |
| | | Tank Size Dimensions (Width x Height x Depth) | | | | | |
| A-999-101 | | 30 through 80 G | allon | 4 in. x 4 in | x 1 in. | | _ |
| A-999-102 | | 120 through 240 gallon 6 in. x 6 in. x 1 in. | | | _ | | |
| Tape #317 | _ | Service Procedures for Johnson Controls AS/AD Air Compressors (Not Shown): This videotape is a visual step-by-step guide to performing maintenance and repair on PureFlow™ air compressors ranging in size from 1/2 to 10 horsepower. Topics covered in this videotape include everything from routine maintenance items (such as changing the oil, replacing the drive belts, and intake filter maintenance, etc.) to more complex repair procedures (including cylinder and ring replacement, changing out the entire pump, and replacing the starter assembly, etc.). This 45 minute color videotape is available from the local Johnson Controls Representative, in either 3/4 in. U-Matic or 1/2 in. VHS formats. | | | | | _ |
| PUBL-2629 | | Installation and Service Manual for Johnson Controls Air Compressors. | | | | | _ |

 $⁽o) \ Four \ vibration/isolation \ pads \ are \ included \ with \ every \ Johnson \ Controls \ air \ compressor \ shipped \ from \ the \ factory.$