

# FX-PCG16 General Purpose Programmable Controller Installation Instructions

FX-PCG1611-x, FX-PCG1621-x

Part No. 24-10143-152, Rev. F

Issued December 5, 2014

Refer to the [QuickLIT website](#) for the most up-to-date version of this document.

## Application

The FX-PCG16 controller is part of the Facility Explorer Controller FX-PCG family. The FX-PCG16 controller runs pre-engineered and user-programmed applications and provides the inputs and outputs required to monitor and control a wide variety of HVAC equipment.

The FX-PCG controllers operate on an RS-485 BACnet® Master-Slave/Token-Passing (MS/TP) Bus as BACnet Application Specific Controllers (B-ASC) and integrate into Johnson Controls® and third-party BACnet systems. With Release 10.1, you can use the FX-PCT software to switch the FX-PCG to use the N2 protocol.

The FX-PCG16 controller is available with or without an integral LCD and push button user interface.

- support SA Bus devices
- support FX-WRZ wireless sensors from the controller using the FX-WRZ7860 receiver when configured for BACnet MS/TP communication

The N2 capable FX-PC controllers:

- do not support Zone Bus (for example, TMZ sensors and M100 actuators) or XT-Bus (System 91) devices (for example, XT, XTM, and XP modules)
- do not support passthru in the commissioning mode

## Switchable Communications Protocols

Release 10.1 of FX-PCT can be used to switch the Field Bus communications protocol in FX-PC Field Controllers to be either the standard BACnet® Master-Slave/Token-Passing (MS/TP) or the N2 protocol. BACnet MS/TP is the default communications protocol for all new controllers. Switchable communications protocols provide a cost-effective upgrade and modernization path for customers with existing N2 controllers. The *Modernization Guide for Legacy N2 Controllers (LIT-12012045)* and the controller-specific documentation provide installation and commissioning support and include tips for efficient and safe replacement. Refer to the *N2 Compatibility Options* chapter of the *Controller Tool Help (LIT-12011147)* for information about mapping N2 Objects in controllers with switchable communications protocols.

The N2 capable FX-PC controllers can be used as functional replacements for legacy N2 controllers. The N2 capable FX-PC controllers:

- have the I/O quantities and characteristics of the FX-PC family controllers
- must be programmed with FX-PCT, which has programming capabilities that are similar (but not identical) to HVACPro, GX9100, GPL, and other legacy tools

## North American Emissions Compliance

### Canada

This Class (A) digital apparatus meets all the requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la Classe (A) respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

### United States

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when this equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the users will be required to correct the interference at their own expense.

## Installation

Observe these guidelines when installing an FX-PCG:

- Transport the controller in the original container to minimize vibration and shock damage.
- Verify that all parts shipped with the controller.
- Do not drop the controller or subject it to physical shock.

## Parts Included

- one FX-PCG16 with removable terminal blocks
- one installation instructions sheet

## Materials and Special Tools Needed

- three fasteners appropriate for the mounting surface (M4 screws or #8 screws)
- one 20 cm (8 in.) or longer piece of 35 mm DIN rail and appropriate hardware for DIN rail mount (only)
- small straight-blade screwdriver for securing wires in the terminal blocks

## Mounting


Observe these guidelines when mounting an FX-PCG:

- Ensure the mounting surface can support the controller, DIN rail, and any user-supplied enclosure.
- Mount the controller horizontally on 35 mm DIN rail whenever possible.
- Mount the controller in the proper mounting position ([Figure 1](#)).
- Mount the controller on a hard, even surface whenever possible in wall-mount applications.
- Use shims or washers to mount the controller securely and evenly on the mounting surface.
- Mount the controller in an area free of corrosive vapors and observe the Ambient Conditions requirements in [Table 10](#).
- Provide for sufficient space around the controller for cable and wire connections for easy cover removal and good ventilation through the controller (50 mm [2 in.] minimum on the top, bottom, and front of the controller).
- Do not mount the controller on surfaces prone to vibration, such as duct work.
- Do not mount the controller in areas where electromagnetic emissions from other devices or wiring can interfere with controller communication.

Observe these additional guidelines when mounting a controller in a panel or enclosure:

- Mount the controller so that the enclosure walls do not obstruct cover removal or ventilation through the controller.
- Mount the controller so that the power transformer and other devices do not radiate excessive heat to the controller.
- Do not install the controller in an airtight enclosure.

**Figure 1: FX-PCG Mounting Positions**

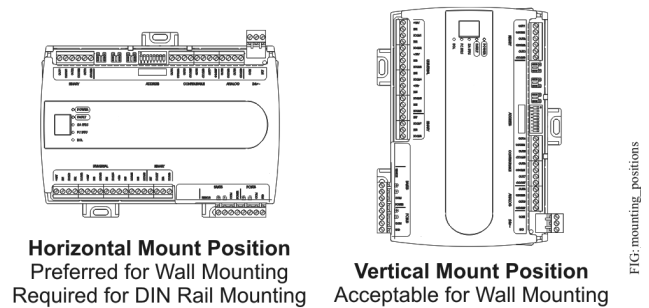

## DIN Rail Mount Applications

Mounting the controller horizontal on 35 mm DIN rail is the preferred mounting method.

To mount an FX-PCG on 35 mm DIN rail:

1. Securely mount a 20 cm (8 in.) or longer section of 35 mm DIN rail horizontal and centered in the desired space so that the controller mounts in the horizontal position shown in [Figure 1](#).
2. Pull the two bottom mounting clips outward from the controller to the extended position ([Figure 2](#)).
3. Hang the controller on the DIN rail by the hooks at the top of the (DIN rail) channel on the back of the controller ([Figure 2](#)), and position the controller snugly against the DIN rail.
4. Push the bottom mounting clips inward (up) to secure the controller on the DIN rail.

To remove the controller from the DIN rail, pull the bottom mounting clips out to the extended position and carefully lift the controller off the DIN rail.

## Wall Mount Applications

To mount an FX-PCG directly on a wall or other flat vertical surface:

1. Pull the two bottom mounting clips outward and ensure they are locked in the extended position as shown in [Figure 2](#).

2. Mark the three mounting hole locations on the wall using the dimensions in *Figure 2* and one of the mount positions shown in *Figure 1*. Or hold the controller up to the wall or surface in a proper mount position and mark the hole locations through the mounting clips.
3. Drill holes in the wall or surface at the locations marked in *Figure 2*, and insert appropriate wall anchors in all of the mounting holes (if necessary).
4. Hold the controller in place, and insert the screws through the mounting clips and into the holes (or anchors). Carefully tighten all of the screws.

**Important:** Do not overtighten the mounting screws. Overtightening the screws may damage the mounting clips.

**Figure 2: Back of Controller Showing Extended Mounting Clips, DIN Rail Channel, and Mounting Dimensions, mm (in.)**

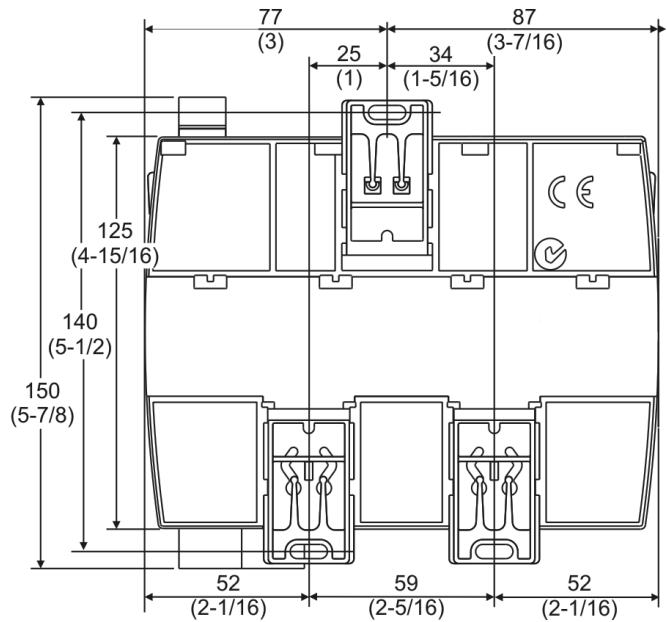


Figure 3: FX-PCG16 Physical Features

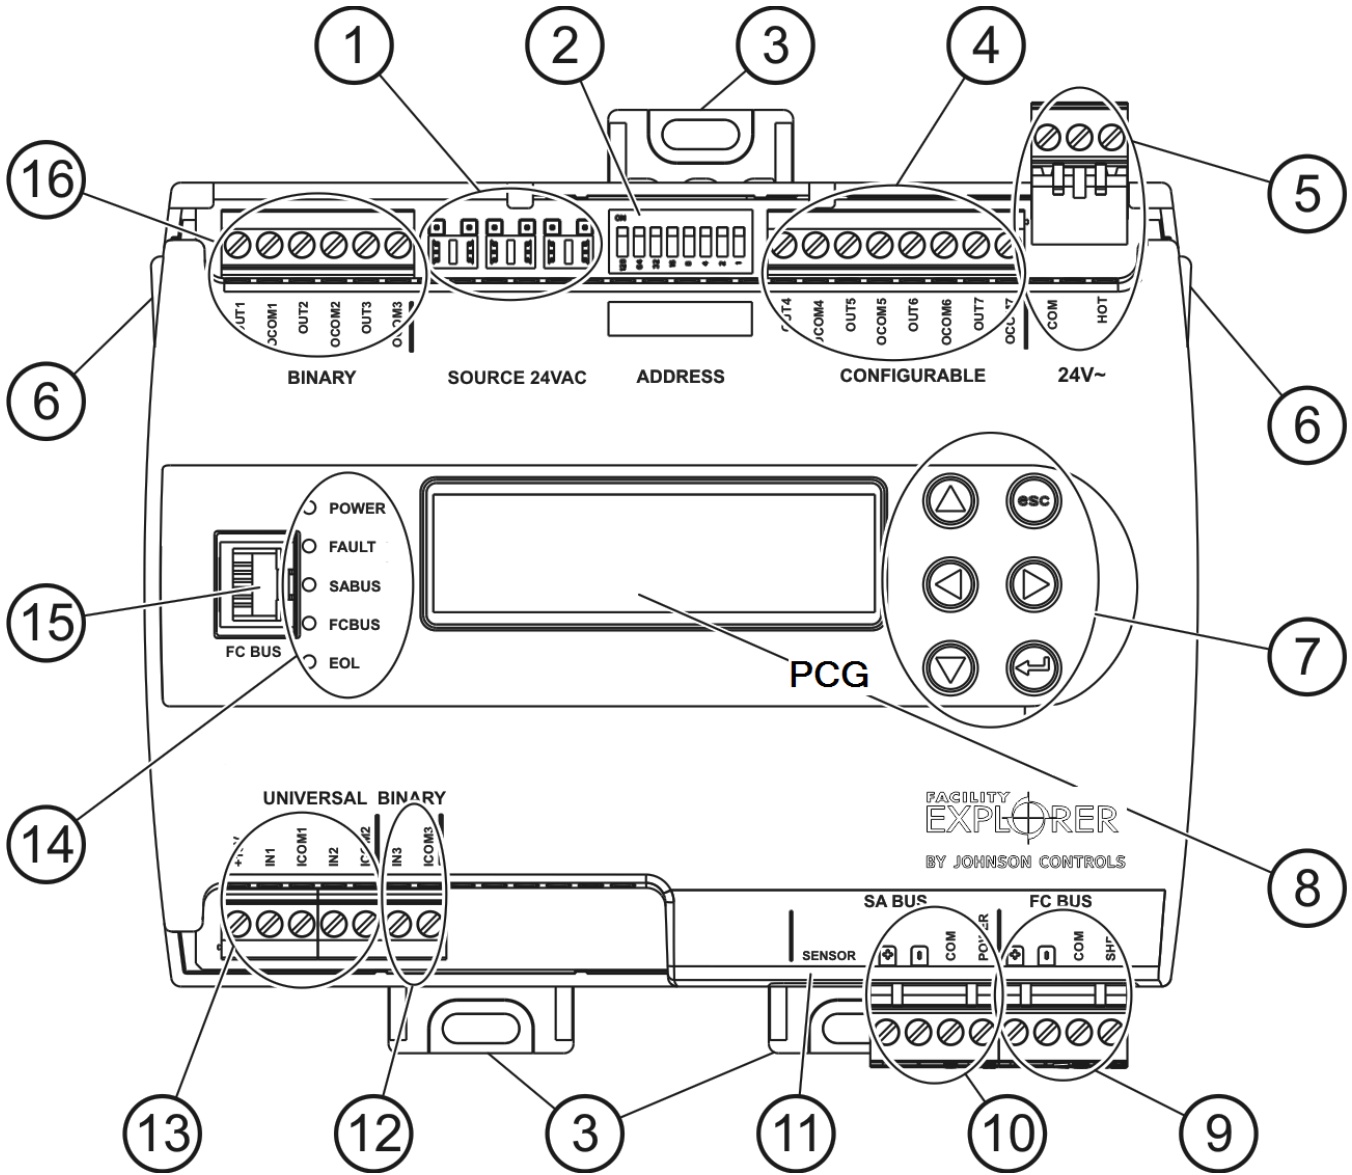


Table 1: FX-PCG Physical Features Callouts and Descriptions

Callout	Physical Feature: Description and References
1	Binary Output (BO) Source Power Selection Jumpers (See <a href="#">Binary Output (BO) Source Power Selection Jumpers</a> )
2	Device Address DIP Switch Block (See <a href="#">Figure 9</a> )
3	Mounting Clip
4	Configurable Output (CO) Terminal Blocks (See <a href="#">Table 3</a> )
5	24 VAC, Class 2 Supply Power Terminal Block (See <a href="#">Supply Power Terminal Block</a> )
6	Cover Lift Tab (One of Two) (See <a href="#">Figure 3</a> )
7	Display Navigation Buttons (See <a href="#">Setting Up an Integral or Local Display</a> ) <b>Note:</b> Not available on all FX-PCG models.
8	LCD Display Area (See <a href="#">Setting Up an Integral or Local Display</a> ) <b>Note:</b> Not available on all FX-PCG models.
9	FC Bus Terminal Block (See <a href="#">FC Bus Terminal Block</a> )


**Table 1: FX-PCG Physical Features Callouts and Descriptions**

Callout	Physical Feature: Description and References
10	Sensor Actuator (SA) Bus Terminal Block (See <a href="#">SA Bus Terminal Block</a> )
11	Sensor Port (Sensor Actuator [SA] Bus, RJ-12 6-pin Modular Jack) (See <a href="#">Figure 6</a> )
12	Binary Inputs (BIs) Terminal Block (See <a href="#">Table 3</a> )
13	Universal Inputs (UIs) Terminal Blocks (See <a href="#">Table 3</a> )
14	LED Status Indicators (See <a href="#">Table 8</a> )
15	Field Controller (FC) Bus Port (RJ-12 6-pin Modular Jack) (See <a href="#">Figure 6</a> )
16	Binary Output (BO) Terminal Block (See <a href="#">Table 3</a> )

## Terminal Wiring Guidelines, Functions, Ratings, and Requirements


### Wiring

Observe the following guidelines when wiring a controller:

 **CAUTION**

**Risk of Electric Shock:** Disconnect the power supply before making electrical connections to avoid electric shock.

**Mise En Garde: Risque de décharge électrique:** Débrancher l'alimentation avant de réaliser tout raccordement électrique afin d'éviter tout risque de décharge électrique.

 **CAUTION**

**Risk of Property Damage:** Do not apply power to the system before checking all wiring connections. Short circuited or improperly connected wires may result in permanent damage to the equipment.

**Mise En Garde: Risque de dégâts matériels:** Ne pas mettre le système sous tension avant d'avoir vérifié tous les raccords de câblage. Des fils formant un court-circuit ou connectés de façon incorrecte risquent d'endommager irrémédiablement l'équipement.

**Important:** Do not exceed the controller electrical ratings. Exceeding controller electrical ratings can result in permanent damage to the controller and void any warranty.

**Important:** Use copper conductors only. Make all wiring in accordance with local, national, and regional regulations.

**Important:** Electrostatic discharge can damage controller components. Use proper electrostatic discharge precautions during installation, setup, and servicing to avoid damaging the controller.

For detailed information on configuring and wiring an MS/TP Bus, FC bus, and SA bus, refer to the *FX-PC Series Controllers MS/TP Communications Bus Technical Bulletin (LIT-12011670)* or to the *MS/TP Communications Bus for BCM System Technical Bulletin (LIT-12011908)*. For detailed information on wiring an N2 bus, refer to the *N2 Communications Bus Technical Bulletin (LIT-636018)*.

### FX-PCG Terminal Blocks and Bus Ports

See [Figure 3](#) for terminal block and bus port locations on the FX-PCG controller. Observe the following guidelines when wiring a controller.

#### Input and Output Terminal Blocks


All of the fixed input terminal blocks are mounted on the bottom of the controller and the output terminal blocks are mounted on the top of the controller. See [Table 3](#) for more information about I/O terminal functions, requirements, and ratings.

#### FC Bus Terminal Block

The FC Bus terminal block is a blue, removable, 4-terminal plug that fits into a board-mounted jack.

Wire the removable FC bus terminal block plugs on the controller, and other controllers in a daisy-chain configuration using 3-wire twisted, shielded cable as shown in [Figure 4](#). See [Table 5](#) for more information.

**Figure 4: FC Bus Terminal Block Wiring**

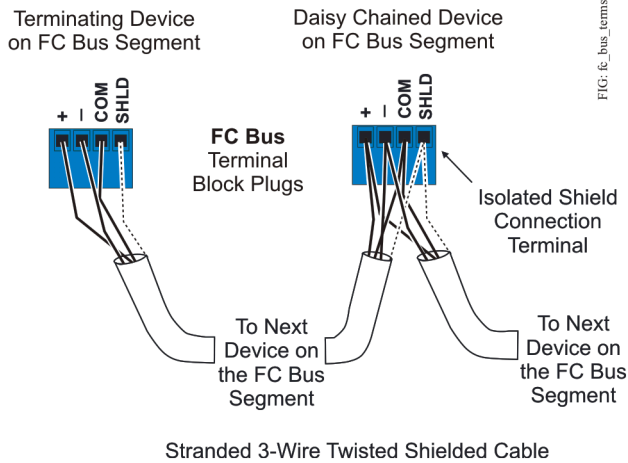


**Note:** The FC bus Shield (SHLD) terminal is isolated and can be used to connect (daisy chain) the shields for FC bus wiring.

**SA Bus Terminal Block**

The SA Bus terminal block is a brown, removable, 4-terminal plug that fits into a board-mounted jack.

Wire the removable SA Bus terminal block plugs on the controller and other SA Bus devices in a daisy-chain configuration using 4-wire twisted, shielded cable as shown in [Figure 5](#). See [Table 5](#) for more information.

**Figure 5: SA Bus Terminal Block Wiring**

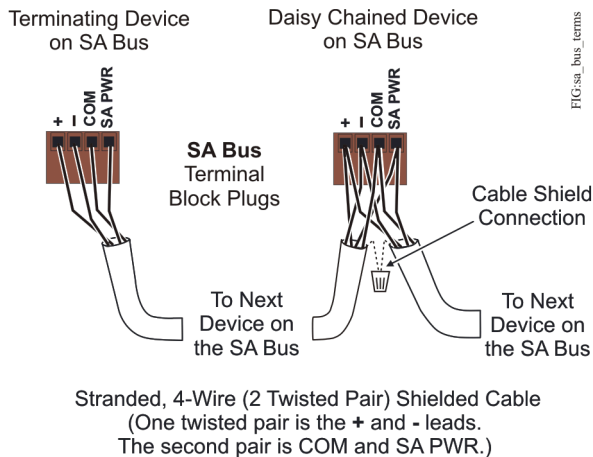

**Note:** The SA PWR terminal supplies 15 VDC. The SA PWR terminal can be used to connect (daisy chain) the 15 VDC power leads on the SA bus.


**FC Bus Port**

The FC bus port on the front of the controller is an RJ-12, 6-position modular jack that provides a connection for the FX-BTCVT Bluetooth® Commissioning Converter, ZFR-USBHA-0 ZigBee® wireless dongle, or FX-ZFR1811 Wireless Field Bus Router.

The FC bus port is connected internally to the FC bus terminal block. See [Table 5](#) for more information. The FC bus Port pin assignment is shown in [Figure 6](#).

**Note:** When an FX-PCG is configured for N2 network communication, the FC bus port is not used.

**Figure 6: Pin Number Assignments for Sensor, SA Bus, and FC Bus Ports on Controllers**

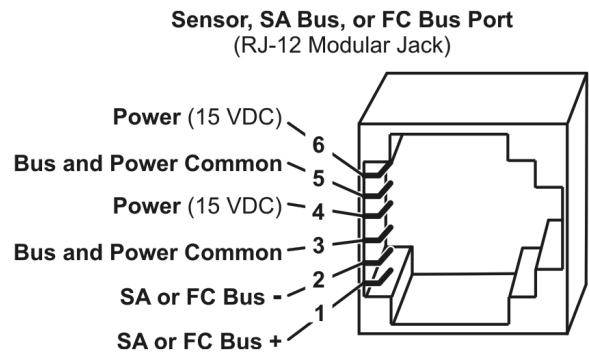

**Sensor Port**

The Sensor (SA Bus) port on the bottom of the controller ([Figure 3](#)) is an RJ-12, 6-position modular jack that provides a connection for the Bluetooth Commissioning Converter, the VAV box Balancing Tool, specified network sensors, or other SA Bus devices with RJ-12 plugs.

When the FX-PCG is configured for N2 communication, the SA Bus port must be used to download and commission the controller.

An FX-DIS1710 Local Controller Display also can be connected to the SA Bus port (but only on FX-PCG models without integral display and push buttons).

The Sensor port is connected internally to the SA bus terminal block. See [Table 5](#) for more information. The Sensor Port pin assignment is shown in [Figure 6](#).


### Supply Power Terminal Block

The 24 VAC supply power terminal block is a gray, removable, 3-terminal plug that fits into a board-mounted jack on the top right of the controller.

Wire the 24 VAC supply power wires from the transformer to the HOT and COM terminals on the terminal plug as shown in [Figure 7](#). The middle terminal on the supply power terminal block is not used. See [Table 5](#) for more information about the Supply Terminal Block.

**Figure 7: 24 VAC Supply Power Terminal Block Wiring**

Disconnect supply power to controller by unplugging Supply Power Plug from Supply Power Jack.

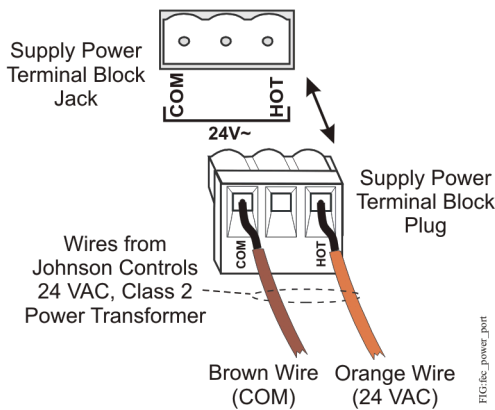

**Note:** The supply power wire colors may be different on transformers from other manufacturers. Refer to the transformer manufacturer's instructions and the project installation drawings for wiring details.

**Important:** Connect 24 VAC supply power to the controller and all other network devices so that transformer phasing is uniform across the network devices. Powering network devices with uniform 24 VAC supply power phasing reduces noise, interference, and ground loop problems. The controller does not require an earth ground connection.

### Wireless Network Applications

When configured for BACnet MS/TP communication, the controller can also be installed in a wireless application using an FX-ZFR1811 Series Wireless Field Bus Router.

To configure a controller for use with the FX-ZFR1811 Series Wireless Field Bus system:

1. Wire the input/output terminals and SA bus.

**Note:** In wireless network applications, do not connect any wires to the FC Bus terminal block. (Connect the SA/FC terminal block on an FX-PCX to an SA bus only.)







2. Connect the FX-ZFR1811 Wireless Field Bus Router to the FC bus port (RJ-12 modular jack) on the front of the controller.
3. Ensure that the controller's device address DIP switches are set to the correct device address. See [Setting the Device Addresses](#).
4. Set DIP switch 128 to ON, which enables wireless operation on the controller.

For more information on installing a controller in a wireless configuration, refer to the *FX-ZFR1811 Wireless Field Bus Router Installation Instructions* (Part No. 24-10325-29).

# Termination Diagrams

A set of Johnson Controls® termination diagrams provides details for wiring inputs and outputs to the controllers. See the figures in this section for the applicable termination diagrams.

**Table 2: Termination Details**

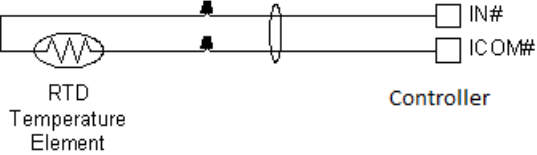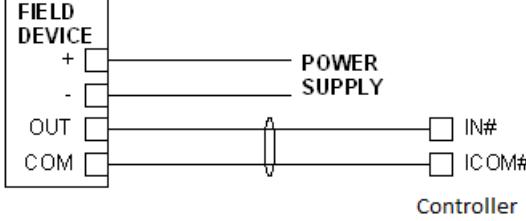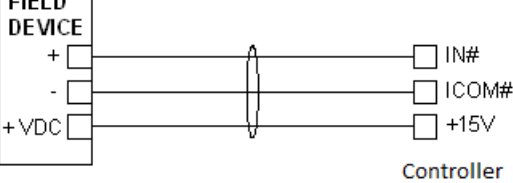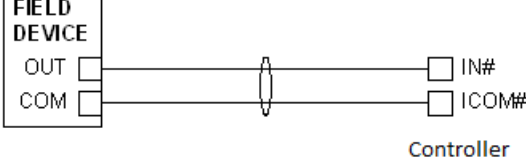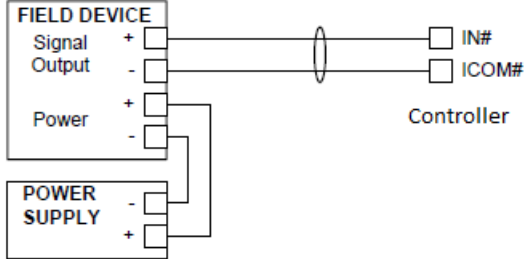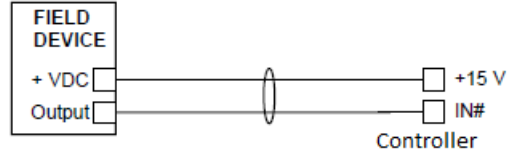Type of Field Device	Type of Input/Output	Termination Diagrams
Temperature Sensor	UI	 <p>RTD Temperature Element</p> <p>Controller</p>
Voltage Input - External Source	UI	 <p>FIELD DEVICE</p> <p>POWER SUPPLY</p> <p>Controller</p>
Voltage Input - Internal Source	UI	 <p>FIELD DEVICE</p> <p>Controller</p>
Voltage Input (Self-Powered)	UI	 <p>FIELD DEVICE</p> <p>Controller</p>
Current Input - External Source (Isolated)	UI	 <p>FIELD DEVICE</p> <p>POWER SUPPLY</p> <p>Controller</p>
Current Input - Internal Source (2 wire)	UI	 <p>FIELD DEVICE</p> <p>Controller</p>



**Table 2: Termination Details**

Type of Field Device	Type of Input/Output	Termination Diagrams
Current Input - Internal Source (3 wire)	UI	
Current Input - External Source (in Loop)	UI	
Feedback from EPP-1000	UI	
Dry Contact (Binary Input)	UI or BI	
0–20 VDC Output to Actuator (External Source)	CO	<p>Add Jumper from 24VAC Com to only one AO Com per Transformer</p>
0–10 VDC Output to Actuator (Internal Source)	CO	

**Table 2: Termination Details**

Type of Field Device	Type of Input/Output	Termination Diagrams
24 VAC Triac Output (Switch Low, External Source)	CO	<p>The diagram shows a FIELD DEVICE with terminals H and N connected to a Controller. The Controller has terminals 24V Com, 24V Hot, OUT#, and OCOM#.</p>
Incremental Control to Actuator (Switch Low, External Source)	CO	<p>The diagram shows a FIELD DEVICE with terminals COM, CW, and CCW connected to a Controller. The Controller has terminals 24V Com, 24V Hot, OUTb, OUTa, OCOMb, and OCOMa.</p>
24 VAC Triac Output (Switch High, Externally Sourced)	CO	<p>The diagram shows a FIELD DEVICE with terminals H and N connected to a Controller. The Controller has terminals OCOM#, OUT#, 24V Com, and 24V Hot.</p>
Incremental Control to Actuator (Switch High, Externally Sourced)	CO	<p>The diagram shows a FIELD DEVICE with terminals COM, CW, and CCW connected to a Controller. The Controller has terminals 24V Hot, 24V Com, OUTb, OUTa, OCOMa, and OCOMb.</p>
24 VAC Binary Output (Switch Low, Externally Sourced)	BO	<p>The diagram shows a FIELD DEVICE with terminals H and N connected to a Controller. The Controller has terminals 24V Com, 24V Hot, OUT#, and OCOM#. A TRIAC JUMPER is shown with INT and EXT positions.</p>
24 VAC Binary Output (Switch High, Externally Sourced)	BO	<p>The diagram shows a FIELD DEVICE with terminals H and N connected to a Controller. The Controller has terminals OCOM#, OUT#, 24V Com, and 24V Hot. A TRIAC JUMPER is shown with INT and EXT positions.</p>

**Table 2: Termination Details**

Type of Field Device	Type of Input/Output	Termination Diagrams
Incremental Control to Actuator (Switch Low, Externally Sourced)	BO	
Incremental Control to Actuator (Switch High, Externally Sourced)	BO	
Network Stat with Phone Jack (Fixed Address = 199)	SA Bus	<p>THERMOSTAT CIRCUIT BOARD</p> <p>JACK J2 IS FOR COMMISSIONING TOOLS</p> <p>CABLE WITH AN RJ12 CONNECTOR ON EACH END</p> <p>Terminal 1 is to the extreme left as you face the Jack opening Tab Notch down</p> <p>SENSOR 6-Pin PHONE PLUG ( JACK J1)</p> <p>CONTROLLER SENSOR PLUG</p>

**Table 2: Termination Details**

Type of Field Device	Type of Input/Output	Termination Diagrams															
<p><b>Network Stat with Terminals Addressable</b></p>	<p>SA Bus</p>	<p>THERMOSTAT CIRCUIT BOARD</p> <p>ADDRESS SWITCH</p> <table border="1"> <thead> <tr> <th>SW1</th> <th>SW2</th> <th>ADDRESS</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>OFF</td> <td>200</td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>201</td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>202</td> </tr> <tr> <td>ON</td> <td>ON</td> <td>203</td> </tr> </tbody> </table> <p>JACK J2 IS FOR COMMISSIONING TOOLS</p> <p>CONNECTOR ON STAT MOUNTING BASE SLIDES INTO W 4 PINS ON CIRCUIT BOARD</p> <p>FROM PREVIOUS SA BUS DEVICE { COM SA PWR (15VDC) } TO NEXT SA BUS DEVICE IF REQUIRED { COM SA PWR (15VDC) }</p>	SW1	SW2	ADDRESS	OFF	OFF	200	ON	OFF	201	OFF	ON	202	ON	ON	203
SW1	SW2	ADDRESS															
OFF	OFF	200															
ON	OFF	201															
OFF	ON	202															
ON	ON	203															
<p><b>Network Stat with Terminals (Fixed Address = 199)</b></p>	<p>SA Bus</p>	<p>THERMOSTAT CIRCUIT BOARD</p> <p>JACK J2 IS FOR COMMISSIONING TOOLS</p> <p>CONNECTOR ON STAT MOUNTING BASE SLIDES INTO W 4 PINS ON CIRCUIT BOARD</p> <p>FROM PREVIOUS A BUS DEVICE { COM SA PWR (15VDC) } TO NEXT SA BUS DEVICE IF REQUIRED { COM SA PWR (15VDC) }</p>															

# Input and Output Wiring Guidelines

[Table 3](#) provides information and guidelines about the functions, ratings, and requirements for the controller input and output terminals; and references guidelines for determining proper wire sizes and cable lengths.

In addition to the wiring guidelines in [Table 3](#), observe these guidelines when wiring controller inputs and outputs:

- Run all low-voltage wiring and cables separate from high-voltage wiring.
- All input and output cables, regardless of wire size or number of wires, should consist of stranded, insulated, and twisted copper wires.

- Shielded cable is not required for input or output cables.
- Shielded cable is recommended for input and output cables that are exposed to high electromagnetic or radio frequency noise.
- Inputs/outputs with cables less than 30 m (100 ft) typically do not require an offset in the software setup. Cable runs over 30 m (100 ft) may require an offset in the input/output software setup.

**Table 3: FX-PCG Terminal Blocks, Functions, Ratings, Requirements, and Cables**

Terminal Block Label	Terminal Label	Function, Ratings, Requirements	Determine Wire Size and Maximum Cable Length
UNIVERSAL (Inputs)	+15 V	<b>15 VDC Power Source</b> for active (3-wire) input devices connected to the Universal IN $n$ terminals. Provides 100 mA total current	Same as (Universal) IN $n$ <b>Note:</b> Use 3-wire cable for devices that source power from the +15V terminal.
	IN $n$	<b>Analog Input - Voltage Mode (0–10 VDC)</b> 10 VDC maximum input voltage Internal 75k ohm Pull-down	See Guideline <b>A</b> in <a href="#">Table 4</a> .
		<b>Analog Input - Current Mode (4–20 mA)</b> Internal 100 ohm load impedance <b>Note:</b> Current loop jumpers are fail-safe to maintain a closed 4 to 20 mA current loop, even when the power to the controller is interrupted or off. See <a href="#">Universal Input Current Loop Jumpers</a> .	See Guideline <b>B</b> in <a href="#">Table 4</a> .
		<b>Analog Input - Resistive Mode (0–600k ohm)</b> Internal 12 V. 15k ohm pull up Qualified Sensors: 0-2k ohm potentiometer, RTD (1k Nickel [Johnson Controls® sensor], 1k Platinum, and A99B Silicon Temperature Sensor) Negative Temperature Coefficient (NTC) Sensor (10k Type L, 10k JCI Type II, 2.252k Type II)	See Guideline <b>A</b> in <a href="#">Table 4</a> .
		<b>Binary Input - Dry Contact Maintained Mode</b> 1 second minimum pulse width Internal 12 V. 15k ohm pull up	See Guideline <b>A</b> in <a href="#">Table 4</a> .
	ICOM $n$	<b>Universal Input Common</b> for all Universal Input terminals <b>Note:</b> All Universal ICOM $n$ terminals share a common, which is isolated from all other commons.	Same as (Universal) IN $n$

**Table 3: FX-PCG Terminal Blocks, Functions, Ratings, Requirements, and Cables**

Terminal Block Label	Terminal Label	Function, Ratings, Requirements	Determine Wire Size and Maximum Cable Length
<b>BINARY</b> (Inputs)	$IN_n$	<b>Binary Input - Dry Contact Maintained Mode</b> 0.01 second minimum pulse width Internal 18 V. 3k ohm pull up	See Guideline A in <a href="#">Table 4</a> .
		<b>Binary Input - Pulse Counter/Accumulator Mode</b> 0.01 second minimum pulse width (50 Hz at 50% duty cycle) Internal 18 V. 3k ohm pull up	
	$ICOM_n$	<b>Binary Input Common</b> for all Binary Input ( $IN$ ) terminals <b>Note:</b> All Binary $ICOM_n$ terminals share a common, which is isolated from all other commons, except the Configurable Output (CO) common ( $OCOM_n$ ) when the CO is defined as an Analog Output.	
<b>BINARY</b> (Output) Power Selection Jumper positioned to External ( <b>EXT</b> ) power.	$OUT_n$	<b>Binary Output - 24 VAC Triac</b> (External Power Source) Connects $OUT_n$ to $OCOM_n$ when activated. External Power Source Requirements: 30 VAC maximum output voltage 0.5 A maximum output current 1.3 A at 25% duty cycle 40 mA minimum load current	See Guideline C in <a href="#">Table 4</a> .
	$OCOM_n$	<b>Binary Output Common</b> (for $OUT_n$ terminal) <b>Note:</b> Each Binary Output Common terminal ( $OCOM_n$ ) is isolated from <b>all</b> other commons, including other Binary Output Common terminals.	
<b>BINARY</b> (Output) Power Selection Jumper positioned to Internal ( <b>INT</b> ) power.	$OUT_n$	<b>Binary Output - 24 VAC Triac</b> (Internal Power Source) <b>Model FX-PCG1611-0:</b> Sources internal 24 VAC power (24~ COM). <b>Model FX-PCG1611-1:</b> Sources internal 24 VAC power (24~ HOT).	See Guideline C in <a href="#">Table 4</a> .
	$OCOM_n$	<b>Binary Output - 24 VAC Triac</b> (Internal Power Source) <b>Model FX-PCG1611-0:</b> Connects $OCOM_n$ to 24~ HOT when activated. <b>Model FX-PCG1611-1:</b> Connects $OCOM_n$ to 24~ COM when activated. Internal Power Source: 30 VAC maximum output voltage 0.5 A maximum output current 1.3 A at 25% duty cycle 40 mA minimum load current	

**Table 3: FX-PCG Terminal Blocks, Functions, Ratings, Requirements, and Cables**

Terminal Block Label	Terminal Label	Function, Ratings, Requirements	Determine Wire Size and Maximum Cable Length
CONFIGURABLE (Outputs)	OUT <sub>n</sub>	<p><b>Analog Output - Voltage Mode (0–10 VDC)</b></p> <p>10 VDC maximum output voltage</p> <p>10 mA maximum output current</p> <p>Required an external load of 1,000 ohm or more.</p>	See Guideline A in <a href="#">Table 4</a> .
		<p><b>Binary Output - 24 VAC Triac</b> (External Power Source only)</p> <p>Connects OUT<sub>n</sub> to OCOM<sub>n</sub> when activated.</p> <p>External Power Source Requirements:</p> <p>30 VAC maximum output voltage</p> <p>0.5 A maximum output current</p> <p>1.3 A at 25% duty cycle</p> <p>40 mA minimum load current</p>	See Guideline C in <a href="#">Table 4</a> .
	OCOM <sub>n</sub>	<p><b>Analog Output Signal Common</b> All Configurable Outputs (COs) defined as Analog Outputs (AOs) share a common, which is isolated from all other commons except the Binary Input common.</p> <p><b>Binary Output Signal Common</b> All Configurable Outputs (COs) defined as Binary Outputs are isolated from all other commons, including other CO commons.</p>	Same as (Configurable) OUT <sub>n</sub> .

## Cable and Wire Length Guidelines

[Table 4](#) defines cable length guidelines for the various wire sizes that may be used for wiring low-voltage (<30V) input and outputs. Refer to the *Modernization Guide for Legacy N2 Controllers (LIT-12012045)* for additional information about wiring details on N2 Applications.

**Table 4: Cable Length Guidelines for Recommended Wire Sizes for Low-Voltage (<30V) Inputs and Outputs**


Guideline	Wire Size/Gauge and Type	Maximum Cable Length and Type	Assumptions
<b>A</b>	1.5 mm <sup>2</sup> (18 AWG) stranded copper	457 m (1,500 ft) twisted wire	100 mV maximum voltage drop Depending on cable and the connected input or output device, you may have to define an offset in the setup software for the input or output point.
	0.8 mm (20 AWG) stranded copper	297 m (975 ft) twisted wire	
	0.6 mm (22 AWG) stranded copper	183 m (600 ft) twisted wire	
	N/A (24 AWG) stranded copper	107 m (350 ft) twisted wire	
<b>B</b>	1.5 mm <sup>2</sup> (18 AWG) stranded copper	229 m (750 ft) twisted wire	100 mV maximum voltage drop Depending on cable and the connected input or output device, you may have to define an offset in the setup software for the input or output point.
	0.8 mm (20 AWG) stranded copper	137 m (450 ft) twisted wire	
	0.6 mm (22 AWG) stranded copper	91 m (300 ft) twisted wire	
	N/A (24 AWG) stranded copper	61 m (200 ft) twisted wire	
<b>C</b>	See <a href="#">Figure 8</a> to select wire size/gauge. Use stranded copper wire	See <a href="#">Figure 8</a> to determine cable length. Use twisted wire cable.	N/A

## Maximum Cable Length versus Load Current

Use [Figure 8](#) to estimate the maximum cable length relative to the wire size and the load current (in mA) when wiring inputs and outputs.

**Note:** [Figure 8](#) applies to low-voltage (<30V) inputs and outputs only.

**Figure 8: Maximum Wire Length for Low-Voltage (<30V) Inputs and Outputs by Current and Wire Size**

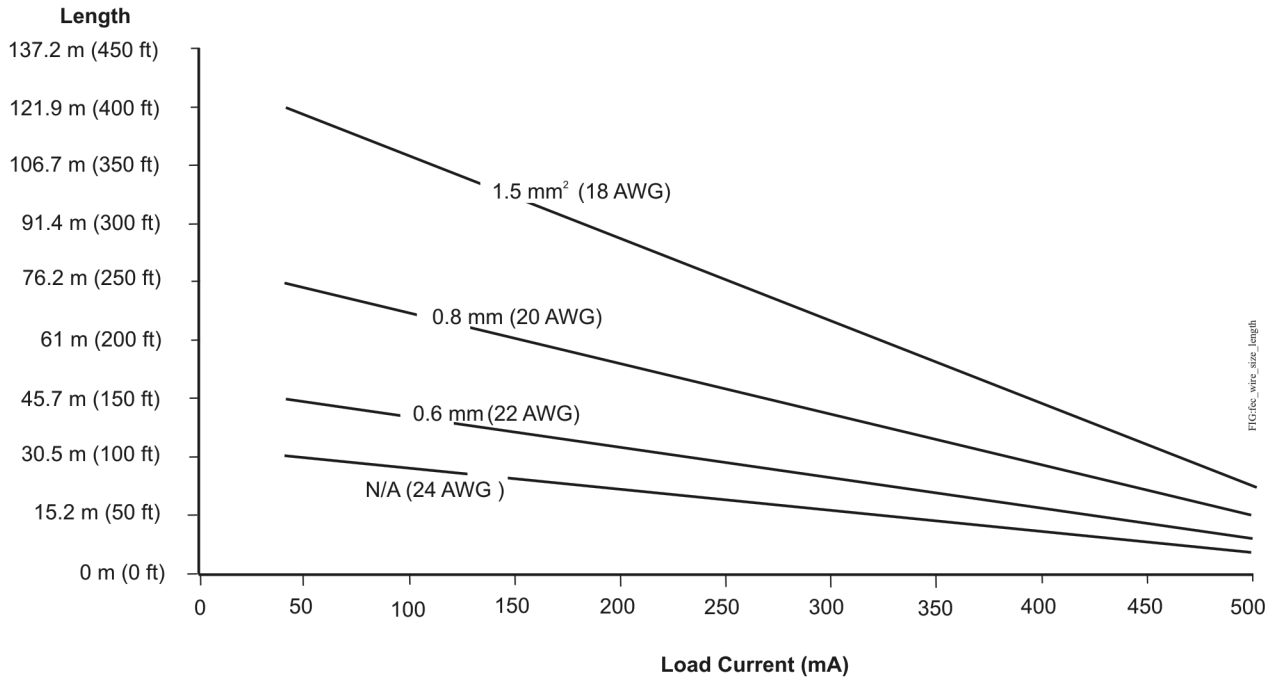

## SA/FC Bus and Supply Power Wiring Guidelines

[Table 5](#) provides information about the functions, ratings, and requirements for the communication bus and supply power terminals; and guidelines for wire sizes, cable types, and cable lengths when wiring the controller's communication buses and supply power.

In addition to the guidelines in [Table 5](#), observe these guidelines when wiring an SA or FC bus and the 24 VAC supply power:

- Run all low-voltage wiring and cables separate from high-voltage wiring.
- All SA and FC bus cables, regardless of wire size, should be twisted, insulated, stranded copper wire.

- Shielded cable is strongly recommended for all SA and FC bus cables.
- Refer to the *FX-PC Series Controllers MS/TP Communications Bus Technical Bulletin (LIT-12011670)* or to the *MS/TP Communications Bus for BCM System Technical Bulletin (LIT-12011908)* for detailed information about wire size and cable length requirements for the SA and FC buses.



**Table 5: Communications Bus and Supply Power Terminal Blocks, Functions, Ratings, Requirements, and Cables**

Terminal Block/Port Label	Terminal Labels	Function, Electrical Ratings/Requirements	Recommended Cable Type
FC BUS <sup>1</sup>	+ -	FC Bus Communications	0.6 mm (22 AWG) stranded, 3-wire twisted, shielded cable recommended
	COM	Signal Reference (Common) for Bus communications	
	SHLD or	Isolated terminal (optional shield drain connection)	
FC BUS <sup>1</sup> (Port)		RJ-12 6-Position Modular Connector provides: FC Bus Communications FC Bus Signal Reference and 15 VDC Common 15 VDC, 180 mA, Power for Bluetooth Commissioning Converter or ZFR1811 Wireless Router	Bluetooth Commissioning Converter retractable cable or 24 AWG 3-pair CAT 3 Cable <30.5 m (100 ft)
SA BUS <sup>1</sup>	+ -	SA Bus Communications	0.6 mm (22 AWG) stranded, 4-wire (2 twisted-pairs), shielded cable recommended.  <b>Note:</b> The + and - wire are one twisted pair, and the COM and SA PWR are the second twisted pair of wires.
	COM	SA Bus Signal Reference and 15 VDC Common	
	SA PWR	15 VDC Supply Power for Devices on the SA Bus (Maximum total current draw for SA Bus is 240 mA.)	
Sensor <sup>1</sup>	Sensor	RJ-12 6-Position Modular Connector provides: SA Bus Communications SA Bus Signal Reference and 15 VDC Common 15 VDC Power for devices on the SA bus and Wireless Commissioning Converter	24 AWG 3-pair CAT3 cable <30.5 m (100 ft)
24~	HOT	<b>24 VAC Power Supply - Hot</b> Supplies 20–30 VAC (Nominal 24 VAC)	0.8 mm to 1.5 mm <sup>2</sup> (18 AWG) 2-wire
	COM	<b>24 VAC Power Supply Common</b> (Isolated from all other Common terminals on controller) 35 VA	

<sup>1</sup> The SA Bus and FC Bus wiring recommendations in this table are for MS/TP bus communications at 38.4k baud. For more information, refer to the *FX-PC Series Controllers MS/TP Communications Bus Technical Bulletin (LIT-12011670)* or to the *MS/TP Communications Bus for BCM System Technical Bulletin (LIT-12011908)*. For more information about N2 bus communications, refer to the *N2 Communications Bus Technical Bulletin (LIT-636018)*.

# Setup and Adjustments

## Setting the Device Addresses

FX-PCG controllers are master devices on MS/TP (SA or FC) buses. Before operating FX-PCG controllers on a bus, you **must** set a valid and unique device address for each controller on the bus. You set a controller's device address by setting the positions of the switches on the DIP switch block at the top of the controller ([Figure 3](#)). Consult the appropriate Communication Technical Bulletin to find valid addresses for these controllers.

**Figure 9: Device Address DIP Switch Block Set to Address 21**



**Note:** Switch 128 is used to enable or disable a controller for wireless operation.

FIG:fc\_address\_dip\_switch

**Note:** FX-PCG ship with switch 128 ON and the remaining address switches off rendering the controllers wired slave devices, which do not operate on MS/TP buses, but will not interfere with bus operation. Set a valid and unique device address on the controller before applying power to the controller on the bus.

1. Set **all** of the switches on the address DIP switch block (128 through 1) to off.
2. Set one or more of the seven address switches (64 through 1) to ON, so that the sum of the switch numbers set to ON equals the intended device address. See [Table 6](#) for valid device addresses.

Set the highest number switch that is less than or equal to the intended device address to ON. Then continue setting lower numbered switches until the total equals the intended address. For example, if the intended device address is 21, set switch 16 to ON first, then set switch 4 ON, followed by switch 1 (16+4+1= 21). See [Figure 9](#).

3. Set switch 128 to ON **only** for controllers on an FX-ZFR Series Wireless Field Bus application. For all hard-wired SA and FC bus applications, ensure that switch 128 is set to Off.

**Note:** Do **not** connect a controller with switch 128 set to ON to an active (hard-wired) SA or FC bus. When a controller with switch 128 set to ON and a device address from 4 to 127 is connected to a wired field bus, the entire field bus is rendered inoperable until the controller is disconnected or switch 128 is set to Off.

Refer to the *FX-ZFR Series Wireless Field Bus System Technical Bulletin (LIT-12011660)* for more information on device addresses in wireless applications.

4. Set a unique and sequential device address for each of the controllers connected on the SA or FC bus starting with device address 4.

To ensure the best bus performance, set sequential device addresses with no gaps in the device address range (4, 5, 6, 7, 8, 9, and so on). The controllers do **not** need to be physically connected on the bus in their numerical device address order.

5. Write each FX-PCG's device address on the white label below the DIP switch block on the controller's cover.

[Table 6](#) describes the FC bus and SA bus devices addresses for Johnson Controls® MS/TP communications bus applications.

Refer to the *FX-PC Series Controllers MS/TP Communications Bus Technical Bulletin (LIT-12011670)* or *MS/TP Communications Bus for BCM System Technical Bulletin (LIT-12011908)* for more information on controller device addresses and how to set them on MS/TP buses.

Refer to the *Modernization Guide for Legacy N2 Controllers (LIT-12012045)* for more information on controller device addresses and how to set them on N2 buses.

**Table 6: SA/FC Bus Device Address Descriptions for MS/TP Controllers**

Device Address	Use on Description
0 (Switch 128 Off)	Reserved for FC Bus Supervisory Controller (not for use on FX-PC controllers).
1 to 3 (Switch 128 Off)	Reserved for peripheral devices (not for use on FX-PC controllers).

**Table 6: SA/FC Bus Device Address Descriptions for MS/TP Controllers**

Device Address	Use on Description
4 to 127 (Switch 128 Off)	Used for MS/TP master devices (FX-PC controllers) that are hardwired to an SA Bus or FC Bus.
0 to 3 (Switch 128 ON)	Reserved addresses for wired slave devices (not for use on FX-PC controllers). <b>Note:</b> FX-PCG controllers ship with switch 128 ON and the remaining address switches off rendering the controllers wired slave devices, which do not operate on MS/TP buses.
4 to 127 (Switch 128 ON)	Valid for MS/TP Master controllers on <b>wireless FC Buses only</b> . <b>Note:</b> Do <b>not</b> connect a controller with switch 128 ON to an active ( <b>hard-wired</b> ) SA or FC bus. When a controller with switch 128 ON and a device address from 4 to 127 is connected to a wired field bus, the entire field bus is rendered inoperable until the controller is disconnected or switch 128 is set to Off.

## Removing the Controller Cover

**Important:** Electrostatic discharge can damage controller components. Use proper electrostatic discharge precautions during installation, setup, and servicing to avoid damaging the controller.


**Important:** Disconnect all power sources to the controller before removing the cover and changing the position of any jumper or the EOL switch on the controller. Failure to disconnect power before changing a jumper or EOL switch position can result in damage to the controller and void any warranties.

The controller cover is held in place by four plastic latches that extend from the base and snap into slots on the inside of the housing cover.

To remove the controller cover:

1. Place your fingernails under the two cover lift tabs ([Figure 3](#)) on the sides of the housing cover and gently pry the top of the cover away from the base to release the cover from the two upper latches.
2. Pivot the top of the cover further to release it from the lower two latches.
3. Replace the cover by placing it squarely over the base, and then gently and evenly push the cover on to the latches until they snap into the latched position.

**Figure 10: FX-PCG with Cover Removed Showing EOL Switch and Jumper Positions**

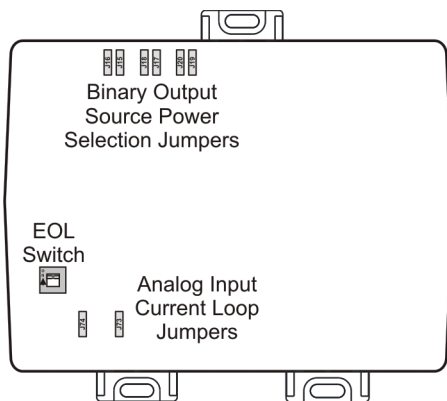

## Setting the End-of-Line (EOL) Switch

Each controller has an EOL switch, which, when set to ON, sets the controller as a terminating device on the bus. See [Figure 10](#) for the EOL switch location. The default EOL switch position is Off.

**Figure 11: End-of-Line Switch Positions**



To set the EOL switch on a controller:

1. Determine the physical location of the controller on the FC bus.
2. Determine if the controller must be set as a terminating device on the bus.

**Note:** Refer to the *FX-PC Series Controllers MS/TP Communications Bus Technical Bulletin (LIT-12011670)* or to the *MS/TP Communications Bus for BCM System Technical Bulletin (LIT-12011908)* for detailed information about EOL termination rules and EOL switch settings on FC buses.

Refer to the *N2 Communications Bus Technical Bulletin (LIT-636018)* for detailed information about EOL termination rules and EOL switch settings on N2 buses.

3. If the controller is a terminating device on the bus, set the EOL switch to ON. If the controller is not a terminating device on the bus, set the EOL switch to Off.

When an FX-PC controller is connected to power with its EOL switch set to ON, the amber EOL LED on the controller cover is lit.

# Setting the Input and Output Jumpers

## Binary Output (BO) Source Power Selection Jumpers




**Risk of Electric Shock:** Disconnect supply power to the controller before attempting to adjust the Binary Output Source Power Selection Jumpers. Failure to disconnect the supply power may result in electric shock.

**Mise En Garde: Risque de décharge électrique:** Débrancher l'alimentation de l'controller avant tout réglage du Binary Output Source Power Selection Jumpers. Le non-respect de cette précaution risque de provoquer une décharge électrique.

**Important:** Do **not** connect an external power source to a BO when the BO power source jumper is in the internal power (INT) position. Connecting external power to a BO that sources internal power can damage the controller and void any warranties.

The BO source power selection jumpers determine whether a BO provides internal power (sourced from the controller) to the output load (INT position) or requires an external power source (EXT position) for the output load. [Figure 12](#) shows an example of a controller BOs and the associated power selection jumpers to the right of the BOs terminal block.


**Figure 12: Example Binary Outputs and the Associated Source Power Jumper Positions**

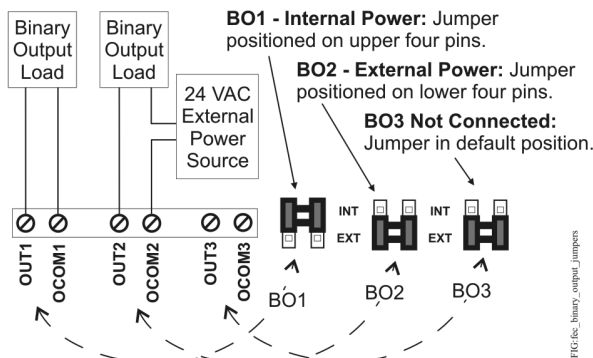

## Universal Input Current Loop Jumpers

The Universal Input (UI) current loop fail-safe jumpers are on the circuit board under the controller cover near the UI terminals ([Figure 10](#)). When a UI is defined (in the system software) as a 4-20 mA Analog Input and the UI's current loop jumper is in the Disabled (default) position ([Figure 13](#)), the 4-20 mA current loop circuit opens whenever power to the controller is interrupted or off.

**Figure 13: Current Loop Jumper Positions**

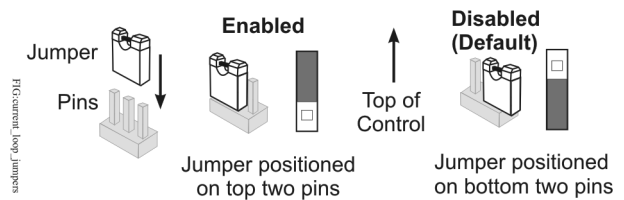

Setting the current loop jumper to the Enabled position ([Figure 13](#)) connects an internal 100 ohm resistor across the UI terminals, which maintains the 4-20 mA current loop circuit even when power to the controller is interrupted or off.

**Important:** Current Loop jumpers must be in the Disabled (default) position for all UIs that are not set up to operate as 4-20 mA analog inputs.

[Table 7](#) identifies the current loop jumpers associated with each UI on the FX-PCG16 controller.

**Table 7: FX-PCG16 UI Inputs and Jumper Labels**

Universal Input Label	Jumper Label on Circuit Board
IN1	J74
IN2	J73

## Setting Up an Integral or Local Display

FX-PCG1621 models have an integral LCD and push button user interface that allows you to set up and monitor the FX-PCG, the FX-PCG I/O points, and the modules and I/O points connected on the SA bus. FX-PCG1611 models do not have an integral display, but can be connected to an FX-DIS1710 Local Controller Display. For detailed information on setting up and operating either an integral user interface or a remotely connected FX-DIS1710 display, refer to the *FX-DIS1710 Local Controller Display Technical Bulletin (LIT-12011666)*.

## Commissioning Controllers

You commission FX-PCG controllers with the FX-PCT software, either via a Bluetooth® Wireless Commissioning Converter, a ZigBee® wireless dongle, or in BACnet Router mode when connected to a Facility Explorer Supervisory Controller. Refer to the *Controller Tool Help (LIT-12011147)* for detailed information on commissioning controllers.

## Troubleshooting Controllers

Observe the Status LEDs on the front of the controller and see [Table 8](#) to troubleshoot the controller. To troubleshoot an integral or local controller display, refer to the *FX-DIS1710 Local Controller Display Technical Bulletin (LIT-12011666)*.

**Table 8: Status LEDs and Descriptions of LED States**

LED Label	LED Color	Normal LED State	Description of LED States
POWER	Green	On Steady	Off Steady = No Supply Power or the controller's polyswitch/resettable fuse is open. Check Output wiring for short circuits and cycle power to controller. On Steady = Power Connected
FAULT	Red	Off Steady	Off Steady = No Faults On Steady = Device Fault; no application loaded; Main Code download required, if controller is in Boot mode, or a firmware mismatch exists between the FX-PCG and the FX-ZFR1811 Wireless Field Bus Router. Blink - 2 Hz = Download or Startup in progress, not ready for normal operation
SA BUS	Green	Blink - 2 Hz	Blink - 2 Hz = Data Transmission (normal communication) Off Steady = No Data Transmission (N/A - auto baud not supported) On Steady = Communication lost, waiting to join communication ring
FC BUS	Green	Blink - 2 Hz	Blink - 2 Hz = Data Transmission (normal communication) Off Steady = No Data Transmission (auto baud in progress) On Steady = Communication lost, waiting to join communication ring
EOL	Amber	Off (Except on terminating devices)	On Steady = EOL switch in ON position Off Steady = EOL switch in Off position

## Repair Information

If a controller fails to operate within its specifications, replace the controller. For a replacement controller, contact your Johnson Controls® representative.

## Accessories

See [Table 9](#) for controller accessories ordering information.

**Table 9: Accessories Ordering Information**

Product Code Number	Description
FX-BTCVT-1	Bluetooth Commissioning Converter, with Bluetooth® Technology
FX-DIS1710-0	Local Controller Display (for use with FX-PCG1611 model only)
FX-ZFR1811-0	Wireless Field Bus Router
TP-2420	Transformer, 120 VAC Primary to 24 VAC secondary, 20 VA, Wall Plug
Y65T31-0	Transformer, 120/208/240 VAC Primary to 24 VAC Secondary, 40 VA, Foot Mount, 8 in. Primary Leads and Secondary Screw Terminals, Class 2 <b>Note:</b> Additional Y6x-x Series transformers are also available. Refer to the <i>Series Y63, Y64, Y65, Y66, and Y69 Transformers Product Bulletin (LIT-125755)</i> for more information.
AS-XFR050-0	Power transformer (Class 2, 24 VAC, 50 VA maximum output), no enclosure
AP-TBK4SA-0	Replacement SA Bus Terminal Blocks, 4-Position, Brown, Bulk Pack

**Table 9: Accessories Ordering Information**

Product Code Number	Description
AP-TBK4FC-0	Replacement FC Bus Terminal Blocks, 4-Position, Blue, Bulk Pack
AP-TBK3PW-0	Replacement Power Terminal Blocks, 3-Position, Gray, Bulk Pack
ZFR-USBHA-0	<p>USB Dongle with ZigBee® Driver provides a wireless connection through FX-PCT to allow wireless commissioning of the wirelessly enabled FX-PCG, FX-PCA, FX-PCX, and FX-PCV field controllers. Also allows use of the FX-ZFR Checkout Tool (FX-ZCT) in FX-PCT.</p> <p><b>Note:</b> The ZFR-USBHA-0 replaces the IA OEM DAUBI_2400 ZigBee USB dongle. For additional information on the ZFR-USBHA-0 ZigBee dongle, refer to the <i>FX-ZFR Series Wireless Field Bus System Technical Bulletin (LIT-12011660)</i> or <i>FX-ZFR Series Wireless Field Bus System Quick Reference Guide (LIT-12011696)</i>.</p>

## Technical Specifications

**Table 10: FX-PCG Technical Specifications**

<b>Product Code Numbers</b>	<p>FX-PCG16x1-x General Purpose Programmable Controller Controller</p> <p>MS-FEC1611-0ET - FEC16 Extended Temperature Field Equipment Controller MS-FEC1611-1ET, FEC16 Extended Temperature Field Equipment Controller FX-PCG1621-0-x Controller with Display and Push-button User Interface</p>
<b>Supply Voltage</b>	24 VAC (nominal, 20 VAC minimum/30 VAC maximum), 50/60 Hz, power supply Class 2 (North America), Safety Extra-Low Voltage (SELV) (Europe)
<b>Power Consumption</b>	<p>14 VA maximum for FX-PCG1611 only</p> <p>20 VA maximum for FX-PCG1621 (with integral display) only</p> <p><b>Note:</b> VA rating does <b>not</b> include any power supplied to the peripheral devices connected to Binary Outputs (BOs) or Configurable Outputs (COs), which can consume up to 12 VA for each BO or CO; for a possible total consumption of an additional 84 VA (maximum).</p>
<b>Ambient Conditions</b>	<p><b>Operating:</b> 0 to 50°C (32 to 122°F); 10 to 90% RH noncondensing</p> <p><b>Storage:</b> -40 to 80°C (-40 to 176°F); 5 to 95% RH noncondensing</p> <p><b>FEC16 Extended Temperature Field Equipment Controller</b></p> <p><b>Operating:</b> -40 to 70°C (-40 to 158°F); 10 to 90% RH noncondensing</p> <p><b>Storage:</b> -40 to 80°C (-40 to 176°F); 5 to 95% RH noncondensing</p>
<b>Controller Addressing for BACnet MS/TP</b>	DIP switch set; valid controller device addresses 4–127 (Device addresses 0–3 and 128–255 are reserved and not valid controller addresses.)
<b>Controller Addressing for N2</b>	<p>DIP switch set; valid control device addresses 1-255</p> <p><b>Note:</b> Refer to the <i>Modernization Guide for Legacy N2 Controllers (LIT-12012045)</i> for address information when using the controller on an N2 bus.</p>
<b>Communications Bus</b>	<p><b>RS-485: selectable BACnet MS/TP or N2</b></p> <p>3-wire FC bus between the supervisory controller and other controllers</p> <p>4-wire SA bus between controller, network sensors and other sensor/actuator devices, includes a lead to source 15 VDC supply power (from controller) to bus devices.</p> <p><b>N2 Open Protocol:</b></p> <p>N2/FC Bus: 1.5 mm (18 AWG) standard 3-wire, twisted, shielded cable recommended between the supervisory controller and field controllers</p>
<b>Processor</b>	H8SX/166xR Renesas® 32-bit microcontroller

**Table 10: FX-PCG Technical Specifications**

<b>Memory</b>	640 KB flash memory and 128 KB RAM
<b>Input and Output Capabilities</b>	<p><b>2 - Universal Inputs:</b> Defined as 0-10 VDC, 4-20 mA, 0-600k ohm, or Binary Dry Contact</p> <p><b>2 - Binary Input:</b> Defined as Dry Contact Maintained or Pulse Counter/Accumulator Mode</p> <p><b>3 - Binary Outputs:</b> Defined as 24 VAC Triac (selectable internal or external source power)</p> <p><b>4 - Configurable Outputs:</b> Defined as 0-10 VDC or 24 VAC/DC Field-Effect Transistor (FET) BO</p>
<b>Analog Input/Analog Output Resolution and Accuracy</b>	<p><b>Input:</b> 16-bit resolution</p> <p><b>Output:</b> 16-bit resolution, +/- 200 mV accuracy in 0-10 VDC applications</p>
<b>Terminations</b>	<p><b>Input/Output:</b> Fixed Screw Terminal Blocks</p> <p><b>SA/FC Bus and Supply Power:</b> 4-Wire and 3-Wire Pluggable Screw Terminal Blocks</p> <p><b>SA/FC Bus Port:</b> RJ-12 6-Pin Modular Jacks</p>
<b>Mounting</b>	Horizontal on single 35 mm DIN rail mount (preferred), or screw mount on flat surface with three integral mounting clips on controller
<b>Housing</b>	<p><b>Enclosure material:</b> ABS and polycarbonate UL94 5VB; Self-extinguishing, Plenum Rated</p> <p>Protection Class: IP20 (IEC529)</p>
<b>Dimensions(Height x Width x Depth)</b>	150 x 164 x 53 mm (5-7/8 x 6-1/2 x 2-1/8 in.) including terminals and mounting clips <b>Note:</b> Mounting space requires an additional 50 mm (2 in.) space on top, bottom and front face of controller for easy cover removal, ventilation and wire terminations.
<b>Weight</b>	0.4 kg (0.9 lb)
<b>Compliance</b>	<p><b>United States:</b> UL Listed, File E107041, CCN PAZX, UL 916, Energy Management Equipment</p> <p>FCC Compliant to CFR47, Part 15, Subpart B, Class A</p> <p><b>Canada:</b> UL Listed, File E107041, CCN PAZX7 CAN/CSA C22.2 No.205, Signal Equipment</p> <p>Industry Canada Compliant, ICES-003</p> <p><b>Europe:</b> Johnson Controls, Inc. declares that this product is in compliance with the essential requirements and other relevant provisions of the EMC Directive 2004/108/EC.</p> <p><b>Australia and New Zealand:</b> C-Tick Mark, Australia/NZ Emissions Compliant</p> <p><b>BACnet International:</b> BACnet Testing Laboratories (BTL) Protocol Revision 4 Listed BACnet Application Specific Controller (B-ASC)</p>



*The performance specifications are nominal and conform to acceptable industry standard. For application at conditions beyond these specifications, consult the local Johnson Controls® office. Johnson Controls, Inc. shall not be liable for damages resulting from misapplication or misuse of its products.*



**Building Efficiency**  
 507 E. Michigan Street, Milwaukee, WI 53202

*Johnson Controls® is a registered trademark of Johnson Controls, Inc.  
 All other marks herein are the marks of their respective owners. © 2015 Johnson Controls, Inc.*