

ACC-BRKT-100 Mounting Bracket

Kit Includes

- bracket (1)
- self-tapping 1/2 in. screws (2)
- No. 6 sheet metal screws (2)

Tools Required

- 5/16 in. nut driver
- 1/4 in. nut driver

Installation Procedure

The ACC-BRKT-100 bracket is for use with an HE-6320-x humidity/temperature or a TE-637x temperature sensor. To install an ACC-BRKT-100 bracket and sensor inside a duct:

1. Attach the sensor to the mounting bracket using a 1/4 in. nut driver and the two No. 6 sheet metal screws provided. (See Figure 1.)

Note: The sensor must be mounted in an upright position. Refer to the UP arrow on the sensor and see Figure 1. The mounting bracket edge may be positioned to the left, right, top, or bottom of the sensor.

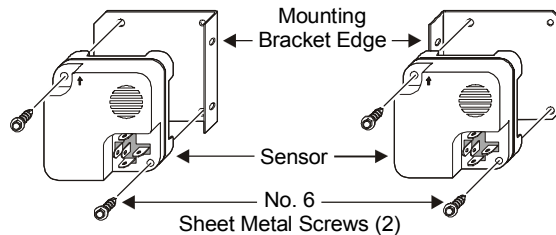


Figure 1: Mounting the Sensor to the Bracket

2. Mount the bracket to the inside of the duct using a 5/16 in. nut driver and the two included self-tapping 1/2 in. screws. (See Figure 2.)

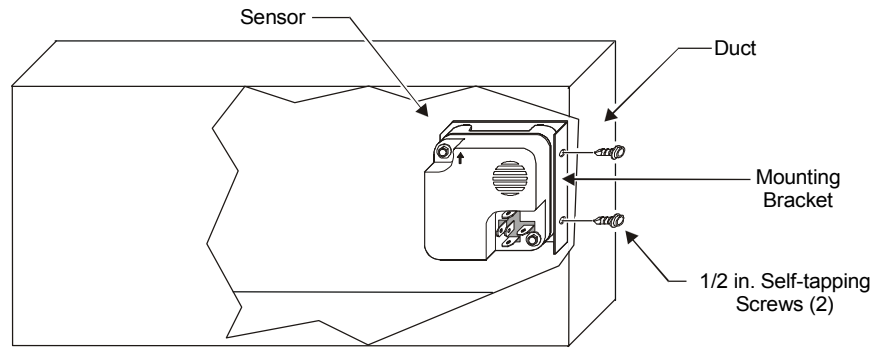


Figure 2: Mounting the ACC-BRKT-100 Inside a Duct