NS8000 Series Network Sensors Catalog Page







Description

The NS Series Network Sensors function directly with Metasys® system Field Equipment Controllers (FECs), Metasys Network and Control Engines (NCEs), Advanced Application Field Equipment Controller (FACs), Metasys VAV Box Equipment Controllers (CVM) and General Purpose Application Controllers (CGM), Input/Output Modules (IOMs), VAV Modular Assembly (VMA16) Controllers, and Facility Explorer™ FX-PC Series Programmable Controllers (FX-PCGs, FX-PCVs, and FX-PCXs). The sensors are also compatible with Verasys® and Johnson Controls® Smart Equipment.

The NS Series Network Sensors monitor zone temperature, relative humidity, carbon dioxide (CO_2) , motion, and local temperature setpoint adjustments. The sensor transmits this data to a controller on the Sensor/Actuator (SA) bus.

Some NS Series Network Sensors models include an onboard passive infrared (PIR) occupancy sensor that detects motion to determine if a space is occupied. This feature maximizes up to 30% energy savings in high-energy usage environments such as schools, dormitories, offices, hospitals, and hotels by adjusting the temperature of the space based on the occupancy status. In addition, the PIR occupancy sensor facilitates trending of floor space usage in these environments.

Some models of the NS Series Network Sensors include a touch display to view zone temperature, RH, CO_2 , and adjust the zone temperature setpoint and fan speed. These models have the capability to set the default display to temperature, RH, or temperature setpoint. On these display models the user can also choose between degrees Fahrenheit (F) and degrees Celsius (C). To prevent tampering with the sensor, display models also include a screen lockout feature.

The display models include the following fan speeds:

- Automatic
- Off
- Low
- Medium
- High

The user can use the occupancy override function to signal to the controller that the zone is occupied and to override the scheduled mode.

temperature. Instead of a display, these models have two cap touch buttons with seven LED lights that represent the current setpoint.

All models have DIP switches to set a unique address for applications that require multiple sensors. For communication wiring flexibility, they also include both modular phone jacks, and screw terminals to terminate the wiring connecting the sensors to the controller.

Note: To connect the NS Series Network Sensor to the same SA bus segment, use only one of the two connection methods, either the modular phone jack or the screw terminals.

Each network sensor includes a SA bus access port, allowing for accessories to connect to the SA bus. Through this connector, the user can use accessories to service or commission the connected controller or gain access to any other controller on the same field controller (FC) bus.

The NS Series Network Sensors can be surface mounted or vertical wallbox mounted to meet the requirements of the specific application. All display models are optimized for the California Energy Code (Title 24). To suit specific architectural and interior design needs, all models come with either black or white enclosures.

All sensors are serialized for quality and warranty purposes. Based on the serial number, the user can obtain factory calibration certificates.

Modern enclosures in black or white design themes are available in the following three styles:

- LCD fixed segment display: View zone temperature, RH, CO2, occupancy status, and adjust the zone temperature setpoint and fan speed. These models have the capability to set the default display to temperature, RH or temperature setpoint. On these display models, you can also choose between degress Fahrenheit (F) and degrees Celsius (C).
- Warmer/Cooler interface: This interface incorporates cap touch buttons with seven LED lights that represent the current setpoint status.
- No display: The NS Series Network Sensors are available in high gloss black or white with or without the Johnson Controls logo.

Refer to the *NS 8000 Series Network Sensors Product Bulletin* (*LIT-12013113*) for important product application and single point of contact information.

Some models also have a Warmer/Cooler interface to adjust the zone

The performance specifications are nominal and conform to acceptable industry standards. For applications at conditions beyond these specifications, consult the local Johnson Controls office. Johnson Controls shall not be liable for damages resulting from misapplication or misuse of its products. © 2019 Johnson Controls. www.johnsoncontrols.com



Features

- BACnet® MS/TP protocol communication—Provides compatibility with Metasys system field controllers, Facility Explorer programmable controllers as well as Verasys and Johnson Controls Smart Equipment in a proven communication network.
- · Single and multifunctional sensors—Choose temperature, humidity, CO2, and occupancy sensing depending on HVAC needs.
- Large backlit fixed segment display available on some models—Provides real-time status of the environment with backlighting activated during user interaction.
- Simple temperature setpoint adjustment or Warmer/Cooler mode available on display models—Configure simple setpoint adjustment or Warmer/Cooler mode.
- Onboard occupancy sensor available on PIR models—Maximizes up to 30% energy savings in high-energy usage environments, and facilitates trending of floor space usage.
- Temporary occupancy included on all display and Warmer/Cooler models—Provides a timed override command, which initiates a temporary occupancy state.
- Field-selectable default display setting on display models—Toggle between temperature, RH or temperature setpoint on the display, and set the desired default for continuous viewing.
- Fahrenheit/Celsius (°F/°C) selectable on display models—Display temperature in degrees Fahrenheit or degrees Celsius.
- All display models meet California Energy Code (Title 24)—Displays the required State of California Title 24 economizer fault conditions.
- · All display models include a screen lockout—Prevents sensor tampering.
- Serialized sensors and calibration certificates—Obtain factory calibration certificates for all models.

Repair information

If the NS Series Network Sensor fails to operate within its specifications, replace the unit. For a replacement sensor, contact the nearest Johnson Controls representative.

Ordering information

The tables below list the various NS Series Network Sensors available.

IMPORTANT: The NS Series Network Sensor is intended to provide an input to equipment under normal operating conditions. Where failure or malfunction of the network sensor could lead to personal injury or property damage to the controlled equipment or other property, additional precautions must be designed into the control system. Incorporate and maintain other devices, such as supervisory or alarm systems or safety or limit controls, intended to warn of or protect against failure or malfunction of the network sensor.

Note: Keep the system software up to date as some NS Series Network Sensor features are not supported in previous releases of Metasys, Facility Explorer, Verasys, or Johnson Controls Smart Equipment system software.

Selection charts

NS Series Network Sensor ordering information: temperature, humidity and CO₂ models (3% RH)

Product code number	Display and interface information	Johnson Controls Logo	Color	PIR occupancy sensor
NSB8BHC040-0	No display	Yes	White	No
NSB8BHC041-0		No	White	No
NSB8BHC042-0		Yes	Black	No
NSB8BHC043-0		No	Black	No
NSB8MHC040-0		Yes	White	Yes
NSB8MHC041-0		No	White	Yes
NSB8MHC042-0		Yes	Black	Yes
NSB8MHC043-0		No	Black	Yes
NSB8BHC240-0	Fixed segment display	Yes	White	No
NSB8BHC241-0		No	White	No
NSB8BHC242-0		Yes	Black	No
NSB8BHC243-0		No	Black	No
NSB8MHC240-0		Yes	White	Yes
NSB8MHC241-0		No	White	Yes
NSB8MHC242-0		Yes	Black	Yes
NSB8MHC243-0	1	No	Black	Yes

The performance specifications are nominal and conform to acceptable industry standards. For applications at conditions beyond these specifications, consult the local Johnson Controls office. Johnson Controls shall not be liable for damages resulting from misapplication or misuse of its products. © 2019 Johnson Controls. www.johnsoncontrols.com

Product code number	Display and interface information	Johnson Controls logo	Color	PIR occupancy sensor
NSB8BHN240-0	Fixed segment display	Yes	White	No
NSB8BHN241-0		No	White	No
NSB8BHN242-0		Yes	Black	No
NSB8BHN243-0		No	Black	No
NSB8MHN240-0		Yes	White	Yes
NSB8MHN241-0		No	White	Yes
NSB8MHN242-0		Yes	Black	Yes
NSB8MHN243-0		No	Black	Yes
NSB8BHN040-0	No display	Yes	White	No
NSB8BHN041-0		No	White	No
NSB8BHN042-0		Yes	Black	No
NSB8BHN043-0		No	Black	No
NSB8MHN040-0		Yes	White	Yes
NSB8MHN041-0		No	White	Yes
NSB8MHN042-0		Yes	Black	Yes
NSB8MHN043-0		No	Black	Yes
NSB8BHN140-0	Warmer/Cooler interface	Yes	White	No
NSB8BHN141-0	1	No	White	No
NSB8BHN142-0	1	Yes	Black	No
NSB8BHN143-0	1	No	Black	No

NS Series Network Sensor ordering information: temperature and humidity models (3% RH)

NS Series Network Sensor ordering information: temperature and CO₂ models

Product code number	Display and interface information	Johnson Controls logo	Color	PIR occupancy sensor
NSB8BTC040-0	No display	Yes	White	No
NSB8BTC041-0		No	White	No
NSB8BTC042-0		Yes	Black	No
NSB8BTC043-0		No	Black	No
NSB8MTC040-0		Yes	White	Yes
NSB8MTC041-0		No	White	Yes
NSB8MTC042-0		Yes	Black	Yes
NSB8MTC043-0	1	No	Black	Yes
NSB8BTC240-0	Fixed segment display	Yes	White	No
NSB8BTC241-0		No	White	No
NSB8BTC242-0		Yes	Black	No
NSB8BTC243-0		No	Black	No
NSB8MTC240-0		Yes	White	Yes
NSB8MTC241-0		No	White	Yes
NSB8MTC242-0		Yes	Black	Yes
NSB8MTC243-0	1	No	Black	Yes

NS Series Network Sensor ordering information: temperature only models

Product code number	Display and interface information	Johnson Controls logo	Color	PIR occupancy sensor
NSB8BTN240-0	Fixed segment display	Yes	White	No
NSB8BTN241-0		No	White	No
NSB8BTN242-0		Yes	Black	No
NSB8BTN243-0		No	Black	No
NSB8MTN240-0		Yes	White	Yes
NSB8MTN241-0		No	White	Yes
NSB8MTN242-0]	Yes	Black	Yes
NSB8MTN243-0		No	Black	Yes

The performance specifications are nominal and conform to acceptable industry standards. For applications at conditions beyond these specifications, consult the local Johnson Controls office. Johnson Controls shall not be liable for damages resulting from misapplication or misuse of its products. © 2019 Johnson Controls. www.johnsoncontrols.com



(Continued)NS Series Network Sensor ordering information: temperature only models

Product code number	Display and interface information	Johnson Controls logo	Color	PIR occupancy sensor
NSB8BTN040-0	No display	Yes	White	No
NSB8BTN041-0	1	No	White	No
NSB8BTN042-0		Yes	Black	No
NSB8BTN043-0		No	Black	No
NSB8MTN040-0	1	Yes	White	Yes
NSB8MTN041-0		No	White	Yes
NSB8MTN042-0		Yes	Black	Yes
NSB8MTN043-0		No	Black	Yes
NSB8BTN140-0	Warmer/Cooler interface	Yes	White	No
NSB8BTN141-0	1	No	White	No
NSB8BTN142-0	1	Yes	Black	No
NSB8BTN143-0	1	No	Black	No

NS Series Network Sensor ordering information: CO₂ only models without display

Product code number	Johnson Controls logo	Color
NSB8BNC040-0	Yes	White
NSB8BNC041-0	No	White
NSB8BNC042-0	Yes	Black
NSB8BNC043-0	No	Black

NS Series Network Sensor ordering information: temperature and humidity models (2% RH)

Product code number	Display and interface information	Johnson Controls logo	Color
NSB8BPN240-0	Fixed segment display	Yes	White
NSB8BPN241-0		No	White
NSB8BPN242-0		Yes	Black
NSB8BPN243-0		No	Black

NS Sensors with fault code capability error codes

The fault indication comes through the network sensor bus when a network sensor is used in the zone. The LCD indicates the code number for all the required state of California Title 24 economizer fault conditions.

Display text	California Title 24 economizer fault condition	Possible problem
E00	Air temperature sensor failure/fault	Problem with one of the air temperature sensors. Check outdoor air, return air, or supply air sensors.
E01	Not economizing when it should	The economizer is not using outdoor air when it should.
E02	Economizing when it should not	The economizer is allowing outdoor air inside when the conditions are not suitable for economizer operation.
E03	Damper not modulating	The economizer damper is not able to modulate properly. Check damper, linkage to actuator, or the actuator.
E04	Excess outdoor air	The economizer is allowing excess outdoor air inside.

Technical Specifications

Supply voltage		9.8 VDC to 16.5 VDC; 15 VDC nominal (from SA bus)	
Current consumption	Base current draw (all models)	3 mA maximum (non-transmitting)	
	CO ₂ models	15 mA maximum additional current (during measurement)	
	Display models - backlight on	10 mA additional current	
	Warmer/Cooler models - LEDs on	8 mA additional current	
	Note: SA bus applications are limited to a power load of 210 mA. The best practice when configuring an SA bus is t total available operating power consumption to 120 mA or less. This power level allows you to connect a BTCVT W Commissioning Converter temporarily or a DIS1710 Local Controller Display to the bus for commissioning, adjustin monitoring.		
Terminations	·	Modular jack and screw terminal block	
Network sensor addressing	All models DIP switch set from 199 to 206; factory set at 199		
Wire size	Modular jack models	24 AWG or 26 AWG (0.5 mm or 0.4 mm diameter); three twisted pair (six conductors)	
	Screw terminal block models	18 AWG to 22 AWG (1 mm to 0.6 mm diameter); 22 AWG (0.6 mm diameter)	

The performance specifications are nominal and conform to acceptable industry standards. For applications at conditions beyond these specifications, consult the local Johnson Controls office. Johnson Controls shall not be liable for damages resulting from misapplication or misuse of its products. © 2019 Johnson Controls. www.johnsoncontrols.com

Communication rate			Auto-detect: 9.6 kbps, 19.2 kbps, 38.4 kbps, or 76.8 kbps	
Temperature measurement range Temperature sensor type			32°F/0°C to 104°F/40°C	
			Digital temperature sensor	
Humidity sensor type			Thin film capacitive sensor	
Ambient Conditions	Operatin	g	32°F to 122°F (0°C to 50°C); 10% to 90% RH, noncondensing; 85°F (29°C) maximum dew point	
	Storage	Display models	-40°F to 122°F (-40°C to 50°C); 5% to 95% RH, noncondensing	
		Non-display models	-40°F to 185°F (-40°C to 70°C); 5% to 95% RH, noncondensing	
Temperature resolution		<u> </u>	±0.5°F/±0.5°C	
Temperature accuracy	NS Serie	s Network Zone Sensor	±1°F/±0.6°C	
	Tempera	ture element only	±0.36°F/±0.2°C at 70°F/21°C	
Humidity element accuracy	NSB8BP	N24x-0 models	±2% RH for 20% to 80% RH at 50°F to 95°F (10°C to 35°C) ±4% RH for 10% to 20% and 80% to 90% RH at 50°F to 95°F (10°C to 35°C)	
	NSB8BH	xxxx-0 models	±3% RH for 20% to 80% RH at 50°F to 95°F (10°C to 35°C) ±6% RH for 10% to 20% and 80% to 90% RH at 50°F to 95°F (10°C to 35°C)	
CO ₂ measurement range			0 ppm - 2000 ppm	
CO ₂ sensor accuracy	Accuracy		±30 ppm ±3% of CO ₂ reading at 77°F (25°C) and 978 hPa (1,000 ft/300m)	
	Temperature dependence		±1.4 ppm/°F (± 2.5 ppm/°C)	
	Pressure	e dependence	Refer to the NS 8000 Series Network Sensors Installation Instructions (24-11256-00007) for CO ₂ altitude compensation.	
CO ₂ sensor operation range			32°F to 122°F (0°C to 50°C)	
Time constant			10 minutes nominal at 10 fpm airflow	
Default temperature setpoint ad	djustment ra	nge	50°F/10°C to 86°F/30°C in 0.5° increments	
CO ₂ sensor lifespan			10 years under standard operating conditions	
PIR occupancy sensor motion of	detection		Minimum 94 angular degrees up to a distance of 26 ft (8m); Based on clear line of sigl	
Compliance	United S	tates	UL Listed, File E107041, CCN PAZX, Under UL 60730-1, Energy Management Equipment	
			FCC Compliant to CFR 47, Part 15, Subpart B, Class B	
	Canada		cUL Listed, File E107041, CCN PAZX7, Under CAN/CSA E60730-1, Signal Equipment	
			Industry Canada, ICES-003	
CE	Europe		CE Mark – Johnson Controls declares that this product is in compliance with the essential requirements and other relevant provisions of the EMC Directive and RoHS Directive.	
	Australia and New Zealand		RCM Mark, Australia/NZ Emissions Compliant	
	China		RoHS2	
Dimensions (height x width x depth)			3.4 in. x 5 in. x 1.1 in. (85.3 mm x 127.55 mm x 26.8 mm)	
Shipping weight			0.4 lb/0.18 kg	