


HOT TAP INSTALLATION LAYOUT FOR WELDED PIPE

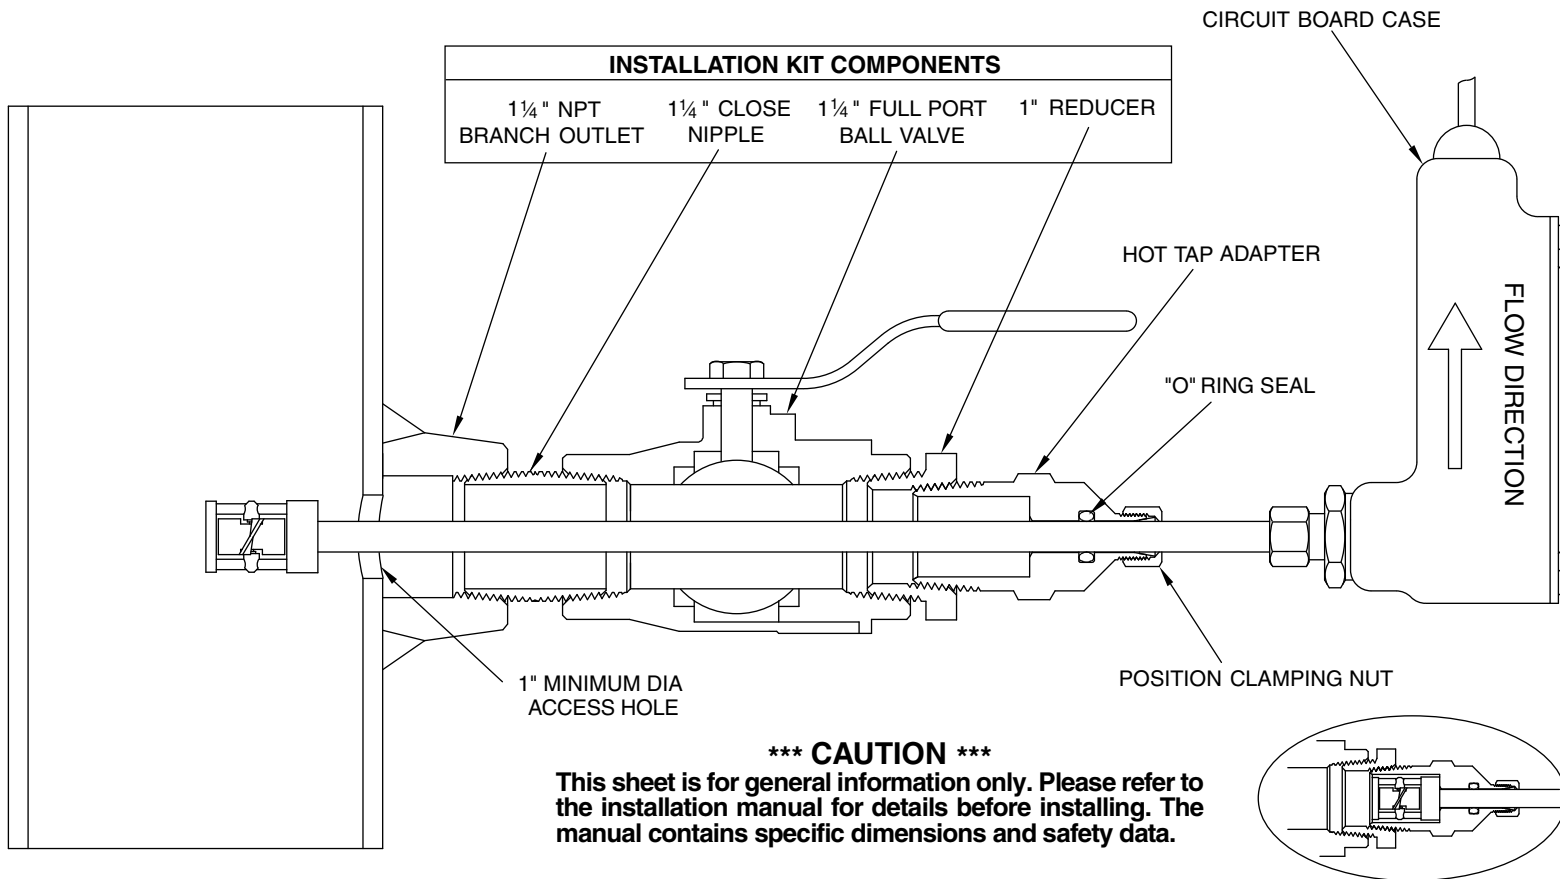

The Hot Tap Installation option allows for the initial installation of the flow meter into a filled and pressurized pipe without system shutdown. This is accomplished by installing the valve assembly and then drilling the 1" access hole through the valve with a hot tap drilling machine.



***** CAUTION *****
 This sheet is for general information only. Please refer to the installation manual for details before installing. The manual contains specific dimensions and safety data.

JCI ITEM #	DESCRIPTION
F-HTAP-INSTL2	Install kit, hot tap, welded steel pipe
F-HTAP-INSTL6	Install kit, hot tap SS, welded steel pipe
F-HTAP-INSTL31	Install kit, hot tap SS, for SS pipe