

ACC-DWCLIP-0 Drywall Clip Mounting Kit

Kit Includes (10 packages with each consisting of the following)


1. Spring clips (2)
2. No. 6-20 x 1-1/4 in. combination screws (2)
3. Spacers for use with 3/8 in. thick drywall (2)

Tools Required

1/4 in. flat-blade screwdriver or No. 2 Phillips screwdriver

Installation Procedure

1. Drill a 1-3/8 in. hole in the surface where the sensor is to be mounted, and pull the wiring through the drilled hole.

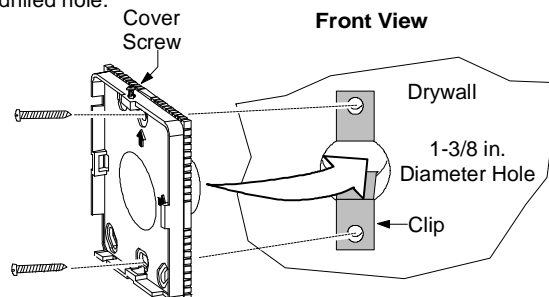

2. Determine if the sensor will be mounted vertically or horizontally, and use the base as a template.
3. Mark the location of the two mounting screws, and drill the holes.

4. Insert the spring clips in the drilled 1-3/8 in. hole as shown. (Do not use the spacers for 1/2 in. drywall.)
5. Pull the wiring through the base.

6. Center the two holes in the base over the two drilled holes, and fasten the base to the drywall using the No. 6 screws provided.

Top Section View

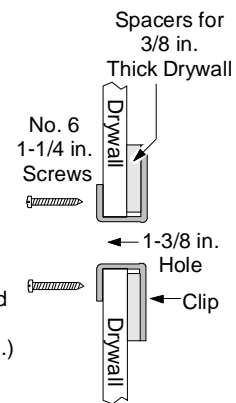


Figure 1: Surface Mounting to Drywall