Date created, 08/14/2017 - Subject to change. © Belimo Aircontrols (USA), Inc.

B312B, 3-Way, Characterized Control Valve Chrome Plated Brass Ball and Nickel Plated Brass Stem







WARRANT
WARF

chilled, hot water, up to 60% glycol
A-port Equal percentage; B-port modified
linear for constant flow
75°
0.5" [15]
npt female ends
forged brass, nickel plated
chrome plated brass
nickel plated brass
EPDM (lubricated)
Teflon® PTFE
EPDM (lubricated)
TEFZEL®
600
0°F to 250°F [-18°C to 120°C]
50 psi (345 kPa)
200 psi
3
0.7 lb [0.3 kg]
0% for A to AB, <2.0% for B to AB
maintenance free




Application


This valve is typically used in air handling units on heating or cooling coils, and fan coil unit heating or cooling coils. Some other common applications include Unit Ventilators, VAV box re-heat coils and bypass loops. This valve is suitable for use in a hydronic system with variable or constant flow.

Suitable Actuators


	Non-Spring	Spring
B312B	TR, LR	TFB(X), LF

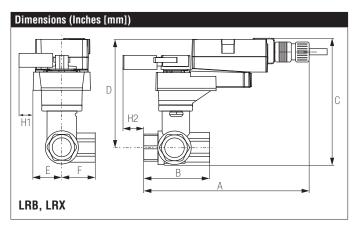


А	В	С	D	Е	F	H1	H2
8.5"	2.38"	5.19"	5" [127]	1.3"	[33]	1.18"	1.1" [28]
[216]	[60]	[132]				[30]	

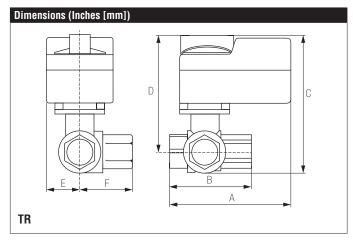



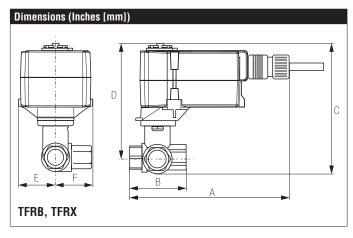

Α	В	C	D	E	F
6.59" [167]	2.38" [60]	4.9" [124]	4.71" [120]	1.53" [38]	1.29" [33]

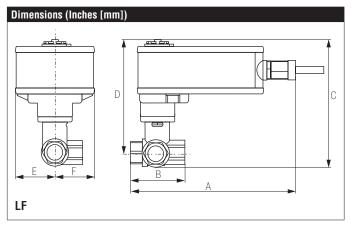

Α	В	С	D	E	F
7.92" [201]	2.38" [60]	6.06" [154]	5.48" [139]	1.82" [46]	1.89" [48]

LF24-3 US, Valve Actuator Floating Point, Spring Return, 24 V







24 VAC, ±20%, 50/60 Hz, 24 VDC, ±10%
2.5 W
1 W
5 VA (class 2 power source)
3ft [1m], 18 GA appliance cable with 1/2" conduit connector
electronic throughout 0° to 95° rotation
floating point
1000 Ω (0.6 W)
No Feedback
90°
reversible with built-in switch
reversible with CW/CCW mounting
visual indicator, 0° to 95° (0° is full spring return position)
150 sec
<25 sec @ -4°F to 122°F [-20°C to 50°C], <60 sec @ -22°F [-30°C]
-22°F to 122°F [-30°C to 50°C]
-40°F to 176°F [-40°C to 80°C]
NEMA 2, IP54
cULus acc. To UL 873 and CAN/CSA C22.2 No. 24-93
<50 dB (A)
<62 dB (A)
maintenance free
ISO 9001

†Rated Impulse Voltage 800V, Type of action 1.AA, Control Pollution Degree 3





Wiring Diagrams



X INSTALLATION NOTES



Actuators with appliance cables are numbered.



Provide overload protection and disconnect as required.



Actuators may also be powered by 24 VDC.



Actuators Hot wire must be connected to the control board common. Only connect common to neg. (-) leg of control circuits. Terminal models (-T) have no-feedback.



Actuators may be connected in parallel if not mechanically linked. Power consumption and input impedance must be observed.



Meets cULus requirements without the need of an electrical ground



WARNING! LIVE ELECTRICAL COMPONENTS!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

