B320-290-400, 6-Way, Characterized Control Valve












Technical Data					
Service	chilled, hot water, up to 60% glycol				
Flow Characteristic	linear				
Controllable Flow Range	Sequence 1 - (0° to 30° angle)1, Dead				
	zone - (30° to 60°), Sequence - 2 (60° to				
	90° angle) ²				
Size [mm]	0.75" [20]				
End Fitting	NPT female ends				
Body	nickel plated brass				
Ball	chrome plated brass				
Stem	nickel plated brass				
Stem Packing	EPDM (lubricated)				
Seat	Teflon® PTFE				
Seat O-ring	EPDM				
Characterized Disc	chrome plated steel				
Body Pressure Rating [psi]	230				
Media Temperature Range	43°F to 180°F [6°C to 82°C]				
(Water)					
Max Differential Pressure (Water)	15 psi for typical applications				
Close-Off Pressure	50 psi				
Leakage	0%				
Seq 1 Cv	2.90				
Seq 2 Cv	4.00				
Servicing	maintenance free				

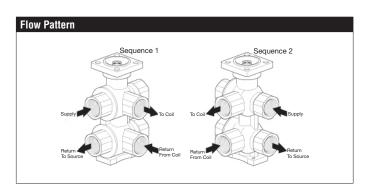


Application

The 6-way characterized control valve is ideal for chilled beams, radiant ceilings, and Fan Coil Units offering reduced wiring by using a single actuator instead of two. It eliminates the need for a change over valve and enables the use of a single coil for heating and cooling.

Operation

A loop pressure relief is designed into port number two (2). This allows the increased pressure to dissipate to the supply loop on port number one (1). This is intended to release any pressure build up in the loop (coil) when the valve is in the closed position and is isolated from the system expansion vessel. The change in pressure occurs due to a change in the media temperature in the coil while isolated from the pressure vessel. The pressure relief does not affect the efficiency of the system because cross-fl ow cannot occur between the heating and cooling loops. The system loops (heating/cooling) should share a common expansion vessel to keep the system pressure and volume balanced.

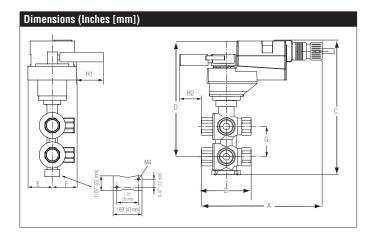

Α	В	С	D	E	F	G	H1	H2
7.53"	3.95"	9.04"	7.61"	1.98	" [50]	2.37"	1.18"	0.5"
[191]	[100]	[229]	[193]			[60]	[30]	[15]

Application Notes

If assembled with a MFT actuator, it must be programmed for proportional control only.

The control valve can be mounted either vertically or horizontally. Do not install the valve with the stem pointing downwards.

A single expansion tank is recommended to ensure same pressure on the heating and cooling loops, this helps to maintain energy efficiency by eliminating migration of water from the cooling to the heating loop.

Maintenance: 6-May characterized control values and rotary actuators are

Maintenance: 6-Way characterized control valves and rotary actuators are maintenance free.

Before any kind of service work is carried out, it is essential to isolate the actuator from the power supply (by disconnecting the power).

LRB24-SR

Modulating, Non-Spring Return, 24 V, for 2 to 10 VDC or 4 to 20 mA





24 VAC ± 20%, 50/60 Hz, 24 VDC ± 10%				
1.5 W				
0.4 W				
3 VA (class 2 power source)				
3 ft [1 m], 18 GA plenum cable with 1/2" conduit connector				
electronic thoughout 0° to 90° rotation				
2 to 10 VDC, 4 to 20 mA w/ ZG-R01 (500 Ω , 1/4 W resistor)				
100 k Ω for 2 to 10 VDC (0.1 mA), 500 Ω for 4 to 20 mA				
2 to 10 VDC				
90°				
reversible with built-in switch				
integrated into handle				
external push button				
90 sec				
-22°F to 122°F [-30°C to 50°C]				
-40°F to 176°F [-40°C to 80°C]				
NEMA 2, IP42, UL enclosure type 2				
cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02, CE acc. to 2004/108/EC				
<35 dB (A)				
maintenance free				
ISO 9001				

†Rated Impulse Voltage 800V, Type action 1.B , Control Pollution Degree 3.



Wiring Diagrams



X INSTALLATION NOTES



Provide overload protection and disconnect as required.

Only connect common to negative (-) leg of control circuits.



Actuators may be connected in parallel. Power consumption and input impedance must be observed.



Actuators may also be powered by 24 VDC.



A 500 Ω resistor (ZG-R01) converts the 4 to 20 mA control signal to 2 to 10 VDC.



Actuators with plenum cable do not have numbers; use color codes



Meets cULus requirements without the need of an electrical ground connection.



WARNING! LIVE ELECTRICAL COMPONENTS!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

