

G315B-G, 3-Way, Globe Valve, Bronze Trim, Mixing/Diverting




Technical Data		
Service	chilled, hot water, up to 60% glycol	
Flow Characteristic	modified equal percentage, linear B to AB	
Controllable Flow Range	stem up - open B to AB	
Size [mm]	0.5" [15]	
End Fitting	NPT female ends	
Body	bronze	
Stem	stainless steel	
Stem Packing	EPDM O-ring	
Seat	bronze	
Plug	brass	
Body Pressure Rating [psi]	ANSI 250	
ANSI Class	ANSI 250 (up to 400 psi below 150°F)	
Media Temperature Range	20°F to 280°F [-7°C to 138°C]	
(Water)		
Max Differential Pressure (Water)	35 psi (241 kPa)	
Rangeability	A-port 100:1, B-port 50:1	
Cv	2.2	
Leakage	ANSI Class VI	
Servicing	repack kits available	

Flow Pattern

Application

This valve is typically used in Air handling units on heating or cooling coils, and fan coil unit heating or cooling coils. Some other common applications include Unit Ventilators, VAV box re-heat coils and bypass loops. This valve is suitable for use in hydronic system with constant or variable flow. These 3-way valves can be used for both Mixing and Diverting depending on the piping configuration.


Suitable Actuators				
	Non-Spring	Spring	Electronic Fail-Safe	
G315B-G	SVB(X)	NFB(X)	SVKB(X)	

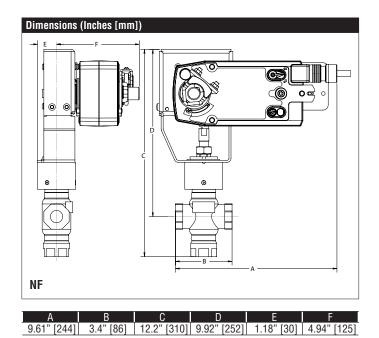


Piping

The valves should be mounted in a weather-protected area in a location that is within the ambient limits of the actuator. Allow sufficient room for valve with actuator and for service. The G2 and G3 preferred mounting position of the valve is with the valve stem vertical above the valve body, for maximum life. However, the assemblies can be mounted with the valve stem vertical or horizontal in relation to the pipe. The actuators should never be mounted underneath the valve, as condensation can build up and result in a failure of the actuators.



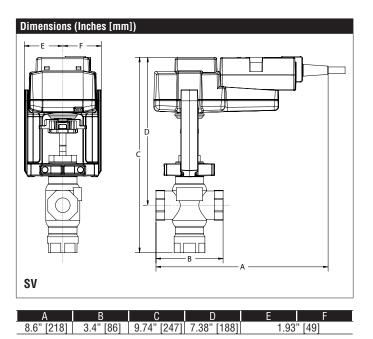

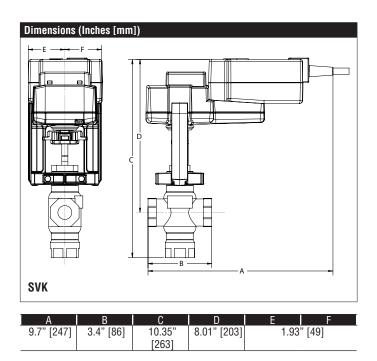





Technical Data		
Power Supply	24 VAC ± 20%, 50/60 Hz, 24 VDC ± 10%	
Power Consumption Running	3 W	
Power Consumption Holding	2 W	
Transformer Sizing	7 VA (class 2 power source)	
Electrical Connection	3 ft, 18 GA plenum rated cable with 1/2"	
	conduit connector protected NEMA 2 (IP54)	
Overload Protection	electronic throughout full stroke	
Electrical Protection	actuators are double insulated	
Operating Range Y	2 to 10 VDC, 4 to 20 mA w/ ZG-R01 (500 Ω , 1/4 W resistor)	
Input Impedance	100 k Ω for 2 to 10 VDC (0.1 mA), 500 Ω for	
	4 to 20 mA	
Feedback Output U	2 to 10 VDC	
Stroke	0.6" [15 mm] LV, 3/4" [20 mm] SV	
Linear Force	337 lbf [1500 N force]	
Direction of Rotation (Motor)	reversible with switch	
Direction of Rotation (Fail-Safe)	reversible with switch	
Position Indication	stroke indicator on bracket	
Manual Override	4 mm hex crank (shipped w/actuator)	
Running Time (Motor)	90 sec, constant independent of load	
Running Time (Fail-Safe)	35 sec	
Bridge Time	2 sec delay before fail-safe activates	
Pre-charging Time	5 to 20 seconds	
Humidity	5 to 95% RH non-condensing	
Ambient Temperature Range	-22°F to 122°F [-30°C to 50°C]	
Storage Temperature Range	-40°F to 176°F [-40°C to 80°C]	
Housing	NEMA 2, IP54, UL enclosure type 2	
Housing Material	Aluminum die cast and plastic casing	
Agency Listings†	cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02, CE acc. to 2004/108/EC and 2006/95/EC	
Noise Level (Motor)	<45 dB (A)	
Noise Level (Fail-Safe)	<60 dB (A)	
Servicing	maintenance free	
Quality Standard	ISO 9001	
Weight	3.5 lb [1.6 kg]	

† Use flexible metal conduit. Push the listed conduit fitting device over the actuator's cable to butt against the enclosure. Screw in conduit connector. Jacket the actuators input wiring with listed flexible conduit. Properly terminate the conduit in a suitable junction box. Rated impulse Voltage 800V. Type of action 1. Control pollution degree 3.



Wiring Diagrams

 $\sqrt{5}$

/18\

🔀 INSTALLATION NOTES

Actuators may also be powered by 24 VDC.

Only connect common to negative (-) leg of control circuits.

A 500 Ω resistor (ZG-R01) converts the 4 to 20 mA control signal to 2 to 10 VDC.

Actuators with plenum cable do not have numbers; use color codes instead.

Meets cULus requirements without the need of an electrical ground connection.

WARNING! LIVE ELECTRICAL COMPONENTS!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

