

C7772A-E Wallplate Temperature Sensor

PRODUCT DATA



FEATURES

- Low profile when mounted on industry standard utility conduit box.
- Rugged, brushed stainless steel wallplate.
- Integral foam pad isolates wallplate sensor from conduit box.
- Insulated screw terminals ensure reliable field wiring connection.
- Models available with a variety of resistive temperature sensor elements.

APPLICATION

The C7772 series of Wallplate Temperature Sensors are designed to be used with the Excel 5000 family and other Honeywell controllers. The C7772 sensors provide a resistive output signal proportional to sensed room or space temperature. The C7772 is well suited for low-profile wall-mounted applications where durability and tamperproof construction is desired, such as schools, prisons and institutions.

Contents

Application	1
Features	1
Specifications	2
Installation	2
Operation	3
Checkout	3



SPECIFICATIONS

Models: See Table 1.

Dimensions: See Fig. 1.

Temperature Ratings:

Operating: 45°F to 99°F (7°C to 37°C).

Shipping: -40°F to 150°F (-40°C to 65°C).

Humidity Ratings: 5 to 95% rh, non-condensing.

Approvals:

National Electrical Code (NEC) Class II.

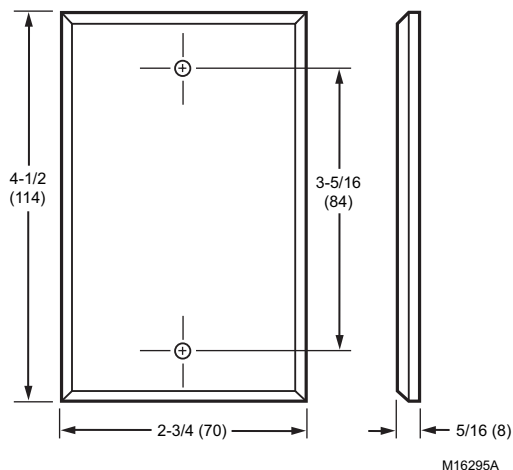


Fig. 1. C7772 Dimensions in in. (mm).

INSTALLATION

When Installing this Product...

1. Read these instructions carefully. Failure to follow them could damage the product or cause a hazardous condition.
2. Check the ratings given in the instructions and on the product to make sure the product is suitable for your application.
3. Installer must be a trained, experienced service technician.
4. After installation is complete, check out product operation as provided in these instructions.
5. Follow local codes for installation and application.

IMPORTANT

All wiring must agree with applicable codes, ordinances and regulations.



CAUTION

Electrical Shock or Equipment Damage Hazard.
Can shock individuals or short equipment circuitry.

Disconnect all power supplies before installation.

Location

The C7772 Wallplate Temperature Sensor should be located where it can sample an average air temperature. Avoid locations where air stratification can cause sensing errors. The sensor mounts directly on a 2 in. x 4 in. conduit box with the screws provided.

Table 1. C7772 Models.

Model	Sensor Type	Nominal Resistance	Resistance-Temperature Curve Type	Leadwire Color
C7772A	20K NTC Thermistor	20,000 ohms at 77°F (25°C)	Non-linear Negative TCR	Green/Blue
C7772B	PT 1000 (TCR=385) Platinum Film	1000 ohms at 32°F (0°C)	Linear Positive TCR	Red
C7772C	PT 100 (TCR=385) Platinum Film	100 ohms at 32°F (0°C)	Linear Positive TCR	Yellow
C7772D	PT 3000 Platinum Film	3,266 ohms at 32°F (0°C)	Linear Positive TCR	Blue
C7772E	1420 ohm Resistor	1420 ohms at 75°F (24°C)	Linear (15 ohms per °F)	Red/Violet

NOTE: TCR = temperature coefficient of resistance.

ORDERING INFORMATION

When purchasing replacement and modernization products from your TRADELINE® wholesaler or distributor, refer to the TRADELINE® Catalog or price sheets for complete ordering number.

If you have additional questions, need further information, or would like to comment on our products or services, please write or phone:

1. Your local Honeywell Automation and Control Products Sales Office (check white pages of your phone directory).
2. Honeywell Customer Care
1885 Douglas Drive North
Minneapolis, Minnesota 55422-4386

In Canada—Honeywell Limited/Honeywell Limitée, 35 Dynamic Drive, Scarborough, Ontario M1V 4Z9.

International Sales and Service Offices in all principal cities of the world. Manufacturing in Australia, Canada, Finland, France, Germany, Japan, Mexico, Netherlands, Spain, Taiwan, United Kingdom, U.S.A.

Mounting

To mount on conduit box (see Fig. 2):

1. Remove the appropriate knockout on the standard utility conduit box for the application.
2. Make wiring connections to the system components.

IMPORTANT

Level only for appearance. The sensor functions normally even when not level.

3. Use the No. 6 screws provided to mount the wallplate to the conduit box.

Wiring



CAUTION

Electrical Shock or Equipment Damage Hazard.
Can shock individuals or short equipment circuitry.

Disconnect all power supplies before installation.



CAUTION

Erratic System Operation Hazard.

Failure to follow proper wiring practices can introduce disruptive electrical interference (noise).
Keep wiring at least one foot away from large inductive loads such as motors, line starters, lighting ballasts, and large power distribution panels.

Shielded cable is required in installations where these guidelines cannot be met.

Ground shield only to grounded controller case.

IMPORTANT

- Temperature sensor wiring can be sized from 16 to 20 AWG depending on the application.
- The maximum length of wire from a device to the wallplate sensor is 300 ft (91m).

NOTE: Erratic temperature readings from a sensor can be caused by the wiring practices described below. These must be avoided to assure proper operation:

1. Do not route temperature sensor wiring with building power wiring, next to control contactors, near light dimming circuits, electric motors or welding equipment.
2. Avoid poor wiring connections.
3. Do not mount sensor in an incorrect environment.

Connect the low voltage wiring from the controller terminals to the sensor screw terminals and tighten. See Fig. 2.

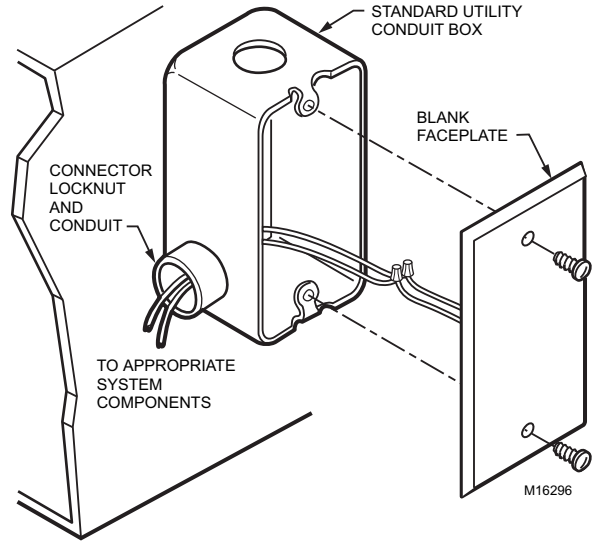


Fig. 2. Mounting, wiring for C7772.

OPERATION

The C7772 Wallplate Temperature Sensor provides a resistive output signal proportional to the sensed room temperature.

CHECKOUT

The C7772 Wallplate Temperature Sensor is immediately operational after wiring connections are made. Use an accurate thermometer of $\pm 1^\circ\text{F}$ (0.5°C) to measure the temperature at the sensor location. To verify sensor accuracy, use an ohmmeter to measure the resistance across the sensor wires and use Table 2 to check the accuracy of the specific model.

Table 2. Typical Resistance of Sensor Models.

	Typical Resistance (in ohms)				
	C7772A	C7772B	C7772C	C7772D	C7772E
At 41°F (5°C)	54,200	1020	102	3310	1930
At 50°F (10°C)	41,758	1039	103.9	3353	1795
At 59°F (15°C)	32,427	1059	105.9	3397	1660
At 68°F (20°C)	25,370	1078	107.8	3440	1525
At 77°F (25°C)	20,000	1097	109.7	3484	1390
At 86°F (30°C)	15,856	1117	111.7	3527	1255
At 95°F (35°C)	12,654	1137	113.7	3571	1120

Automation and Control Solutions

Honeywell International Inc.
1985 Douglas Drive North
Golden Valley, MN 55422
customer.honeywell.com

Honeywell Limited-Honeywell Limitée
35 Dynamic Drive
Scarborough, Ontario M1V 4Z9

® U.S. Registered Trademark
© 2005 Honeywell International Inc.
68-0213—2 B.B. Rev. 08-05



Printed in U.S.A. on recycled
paper containing at least 10%
post-consumer paper fibers.

Honeywell