

# Differential Pressure Sensor (Air)

Differential pressure transmitter with 8 selectable ranges and outputs 0 to 5/10 V or 4 to 20 mA. NEMA 4X / IP65 rated enclosure. For monitoring the differential pressure of air and other non-flammable and non-aggressive gases. Monitoring air filters, fans, industrial cooling air cycles, control of air and fire dampers. Available with LCD display.





	Туре	Measuring Range Pressure	Output Signal Active Pressure	Overpressure Limit	Display Type	Additional Features
	22ADP-58Q	-	DC 010 V, DC 05 V, 420 mA	40 kPa / 160 inch WC	-	-
	22ADP-58QA	-	DC 010 V, DC 05 V, 420 mA	40 kPa / 160 inch WC	-	auto zero
	22ADP-58QB	-	DC 010 V, DC 05 V, 420 mA	40 kPa / 160 inch WC	LCD	auto zero
	22ADP-58QL	-	DC 010 V, DC 05 V, 420 mA	40 kPa / 160 inch WC	LCD	-
Technical Data						
	Electrical Data	Power Supply DC	,	1524 V	, ±10%, 1.1 W	
		Power Supply AC	;	24 V, ±10	0%, 1.7 VA	
		Cable Entry		cable gland PG11 Ø6 to 10 mm, with strain relief Ø6 to 8 mm, 1/2" conduit adapter included		
	Functional Data	Sensor Technolog	ду	piezo me	asuring element	
		Multirange		8 fields s	electable	
		Output Signal Active Note		output DC 0 to 5/10 V selectable with switch voltage output: min. 10 k $\Omega$ load current output: max. 500 $\Omega$ load		
		Display		LCD, 1.14" x 1.38" [29 x 35 mm] with backlight measured values: Pa, inchWC (configurable		
		Media		air		



Sensor Datasheet	22ADP-58Q
Moseurod Valuos	differential prossure

easuring Data	Measured Values	differential pressure			
	Measuring media	air and non-aggressive gases			
	Measuring range settings pressure	Setting range [Pa] range [inch WC] Factory setting			
		S0 0250 01			
		S1 0100 00.4			
		S2 050 00.2			
		S3 025 00.1			
		S4 -2525 -0.10.1			
		\$5 -5050 -0.20.2			
		S6 -100100 -0.40.4 S7 -150150 -0.60.6			
	A course ou Drace ours				
	Accuracy Pressure	±0.004 inch WC (±1 Pa) @ range <1 inch WC (250 Pa)			
Materials	Cable Gland	PA6, black			
	Housing	cover: lexan, Belimo orange NCS S0580- Y6OR			
		base: lexan, Belimo orange NCS S0580- Y6OR			
		seal: 0467 NBR70, black			
Safety Data	Ambient Humidity	max. 95% RH non-condensing			
	Ambient Temperature	15°F to 120°F [-10°C to 50°C]			
	Medium Temperature	15°F to 120°F [-10°C to 50°C]			
	Protection Class IEC/EN	III safety extra-low voltage (selv)			
	Protection Class UL	UL Class 2 Supply			
	EU Conformity	CE Marking			
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-6			
	Certification UL	cULus acc. to UL60730-1A/-2-6, CAN/CSA E60730-1:02, CE acc. to 2004/108/EC and 2006/95/EC, NEMA 4X, IP65, UL Enclosure Type 4X			
	Degree of Protection IEC/EN	IP65			
	Degree of Protection NEMA/ UL	NEMA 4X			
	Quality Standard	ISO 9001			
	Weight	0.29 lbs			

# **Safety Notes**



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorized modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

Type



#### Remarks

Automated Zero-Point Calibration (Auto

uto Transmitters equipped with the auto zero calibration are maintenance free.

. Zero)

The auto-zero calibration electronically adjusts the transmitter zero every 10 minutes. The function eliminates all output signal drift due to thermal, electronic or mechanical effects. The auto-zero adjustment takes approx. 4 seconds after which the device returns to its normal measuring mode. During the 4 second adjustment period, the output and display values will freeze to the latest measured value.

Manual Zero-Point Calibration

In normal operation zero-point calibration should be executed every 12 months.

Attention! For executing zero point calibration the power supply must be connected one hour before.

- Release both connection tubes from the pressure terminals + and -
- · Press the button S1 until the LED lights permanently
- Wait until the LED flashes again and reinstall the connection tubes to the pressure ports (note + and -)

#### **Accessories**

Scope of Delivery mounting plate

dowel screws


cable gland nut conduit 1/2" NPT

Optional Accessories Description

metal duct connectors 1.57" [40 mm] A-22AP-A01 metal duct connectors 4" [100 mm] A-22AP-A03



# Wiring Diagram

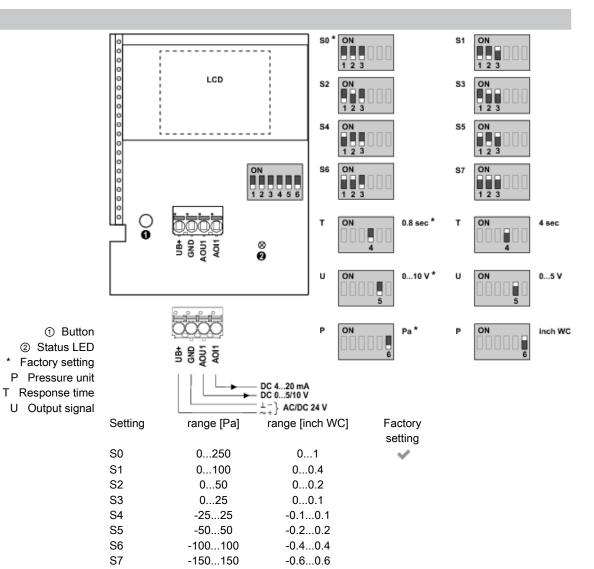

# **Dimensions**

