







| AMX24-LON   |  |
|---|--|
| 24 VAC ± 20% 50/60 Hz   |  |
| 24 VDC ± 10%  |  |
| 3.5 W (1.3 W)   |  |
| 6 VA (Class 2 power source)                                       |  |
| 18 GA plenum rated cable  |  |
| 1/2" conduit connector  |  |
| protected NEMA 2 (IP54)   |  |
| 3 ft [1m]   |  |
| electronic throughout 0 to 95° rotation                           |  |
| max. 95°, adjustable with mechanical stop electronically variable |  |
| 180 in-lb [20 Nm]   |  |
| reversible with $\alpha/\sim$ switch                              |  |
| reflective visual indicator (snap-on)                             |  |
| external push button  |  |
| 150 seconds (default)   |  |
| 5 to 95% RH non condensing (EN 60730-1)                           |  |
| -22°F to 122°F [-30°C to 50°C]                                    |  |
| -40°F to 176°F [-40°C to 80°C]                                    |  |
| NEMA 2, IP54, UL enclosure type 2                                 |  |
| UL94-5VA  |  |
| cULus acc. to UL 60730-1A/-2-14,                                  |  |
| CAN/CSA E60730-1:02,  |  |
| CE acc. to 2004/108/EEC and 2006/95/EC                            |  |
| <45dB(A)  |  |
| maintenance free  |  |
| ISO 9001  |  |
| 2.6 lbs [1.2 kg]  |  |
|   |  |

†Rated Impulse Voltage 800V, Type of action 1, Control Pollution Degree 3.

#### LonWorks®

| according to LonMARK <sup>®</sup> 3.3                      |
|--|
| Neuron 3120  |
| FTT-10A, compatible with LPT-10                            |
| according to LonMARK <sup>®</sup> damper                   |
| actuator object #8110                                      |
| open loop sensor object #1                                 |
| can be run with any LNS based integration                  |
| tool (min. for LNS 3.x)                                    |
| according to LonMARK <sup>®</sup> guidelines               |
| conductor lengths, cable specifications and                |
| topology of the LonWorks <sup>®</sup> network according to |
| the Echelon <sup>®</sup> directives                        |
|  |

LonWorks and LonMARK © 2007-2009 LonMark International

#### Torque min. 180 in-lb for control of damper surfaces up to 45 sq ft.

#### Application

Direct coupled actuators for direct link to LonWorks network. Actuators are easily installed by direct shaft mounting on air dampers in ventilation and air conditioning systems. Actuator can be controlled by any compatible LON system.

For proportional modulation of dampers in HVAC systems. Actuator sizing should be done in accordance with the damper manufacturer's specifications.

The actuator is mounted directly to a damper shaft up to 1.05" in diameter by means of its universal clamp, 1/2" self-centered default. A crank arm and several mounting brackets are available for applications where the actuator cannot be direct coupled to the damper shaft.


#### Operation

The actuator is not provided with and does not require any limit switches, but is electronically protected against overload. The anti-rotation strap supplied with the actuator will prevent lateral movement.

The AMX24-LON series provides 95° of rotation and a visual indicator indicates position of the actuator. When reaching the damper or actuator end position, the actuator automatically stops. The gears can be manually disengaged with a button on the actuator cover.

The AMX24-LON actuators use a brushless DC motor, which is controlled by an Application Specific Integrated Circuit (ASIC). The ASIC monitors and controls the actuator's rotation and provides a digital rotation sensing (DRS) function to prevent damage to the actuator in a stall condition. Power consumption is reduced in holding mode.

Add-on auxiliary switches or feedback potentiometers are easily fastened directly onto the actuator body for signaling and switching functions.

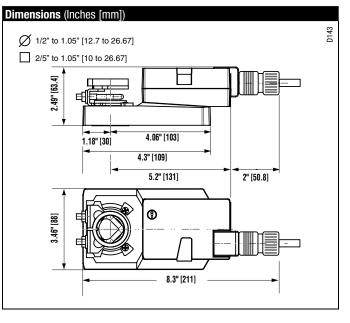

M40024 - 05/10 - Subject to change. © Belimo Aircontrols (USA), Inc


## BELIMO


| Accessories  |  |  |  |  |
|--|--|--|--|--|
| K-SA   | Reversible Clamp                         |  |  |  |
| ZG-100   | Universal Mounting Bracket               |  |  |  |
| ZG-101   | Universal Mounting Bracket               |  |  |  |
| ZG-103   | Universal Mounting Bracket               |  |  |  |
| ZG-104   | Universal Mounting Bracket               |  |  |  |
| Z-SMA  | AM/SM to AM Retrofit Mounting Bracket    |  |  |  |
| ZG-AMA   | Crank arm Adaptor Kit                    |  |  |  |
| AV8-25   | Universal Shaft Extension                |  |  |  |
| ZG-JSA (-1, 2, 3)  | Jackshaft Adaptors for Hollow Jackshafts |  |  |  |
| ZS-100   | Weather Shield - Steel                   |  |  |  |
| ZS-150   | Weather Shield - Polycarbonate           |  |  |  |
| ZS-260   | Explosion Proof Housing                  |  |  |  |
| ZS-300 (-1) (-5)   | NEMA 4X Housing                          |  |  |  |
| Tool-06  | 8 mm & 10 mm Wrench                      |  |  |  |
| S1A, S2A   | Auxiliary Switch (es)                    |  |  |  |
| P370   | Shaft Mount Auxiliary Switch             |  |  |  |
| PA   | Feedback Potentiometers                  |  |  |  |
| SGA24  | Min positioners in NEMA 4 housing        |  |  |  |
| SGF24  | Min positioners for flush panel mounting |  |  |  |
| ADS-100  | Analog to Digital Switch                 |  |  |  |
| NSV24 US   | Battery Back-Up Module                   |  |  |  |
| ZG-X40   | Transformer                              |  |  |  |
| NOTE: When using AMX24-1 ON actuators only use accessories listed on this page |  |  |  |  |

NOTE: When using AMX24-LON... actuators, only use accessories listed on this page

#### **Typical Specification**

Proportional control damper actuators shall be electronic direct-coupled type, which require no crank arm and linkage and be capable of direct mounting to a shaft up to 1.05" diameter. Actuators shall have brushless DC motor technology and be protected from overload at all angles of rotation. Actuators shall have reversing switch and manual override on the cover. Run time shall be constant and independent of torque. Actuators shall be cULus listed, have a 5-year warranty, and be manufactured under ISO 9001 International Quality Control Standards. Actuators shall be as manufactured by Belimo.

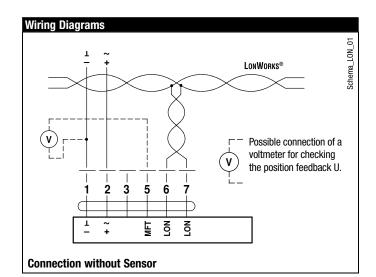

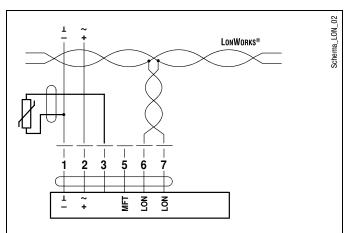


#### Sensor scaling:


The sensors can be scaled with the sensor plug-in (sensor table).

| Sensor | Temperature range                 | Resistance range  | Resolution |
|--------|-----------------------------------|-------------------|------------|
| Ni1000 | −28 +98°C                         | 850 1600 $\Omega$ | 1Ω         |
| PT1000 | −35 +155°C                        | 850 1600 $\Omega$ | 1Ω         |
| NTC    | -10 +160°C<br>(depending on type) | 200 60 k $\Omega$ | 1Ω         |

#### Connection with Passive Sensor, e.g. Pt1000, Ni1000, NTC

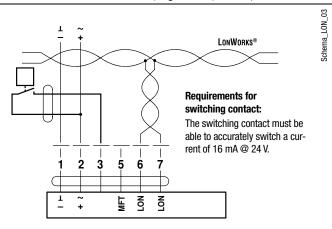

#### Connection with Switching Contact, e.g. $\Delta p$ -monitor

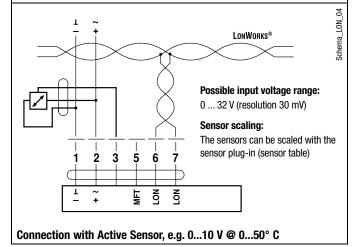


#### LonWorks®, Non-Spring Return, 24 V



#### Functional Profile according to LonMARK®

The LON-capable damper actuator is certified by LonMARK<sup>®</sup>. The actuator functions are supplied with the LonWorks<sup>®</sup> network as standardized network variables according to LonMARK<sup>®</sup>. The Node Object #0, the Damper Actuator Object #8110 and the Open Loop SensorObject #1 are implemented in the actuator.

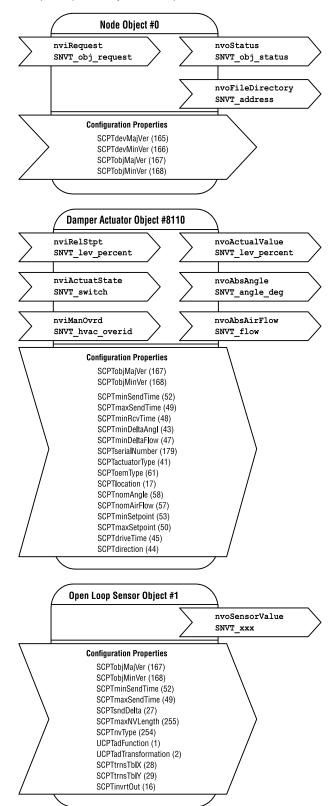

#### Node object #0

The node object contains the object status and object request functions.

nviRequest SNVT\_obj\_request Input variable for requesting the status of a particular object in the node.

nvoStatus SNVT\_obj\_status Output variable that outputs the current status of a particular object in the node.

#### nvoFileDirectory SNVT address

Output variable that shows information in the address range of the Neuron chip.

#### Damper actuator object #8110

The actuator object is used to map the functions of the MP actuators to the LONWORKS® network.

#### nviRelStpt SNVT\_lev\_percent

The nominal position is assigned to the actuator via this input variable. This variable is normally linked to the output variable of an HVAC controller.

#### nviActuateState SNVT\_switch

A preset position is assigned to the actuator via this input variable. Note on priority: The last variable that was active, either nviActuatorState or nviRelStpt, has priority.

#### nviManOvrd SNVT\_hvac\_overid

These input variables can be used to manually override the actuator into a particular position.

#### nvoActualValue SNVT\_lev\_percent

This output variable shows the current actual position of the actuator and can be used for control circuit feedback or for displaying positions.

#### nvoAbsAngle SNVT\_angle\_deg

This output variable shows the current angle of rotation of the actuator

or the valve and can be used to display the position or for service purposes.

#### nvoAbsAirFlow SNVT\_flow

This output variable is inactive with the SR24ALON-5 rotary actuator and shows a constant value of 65535 (this variable is only active in conjunction with LON-capable VAV controllers).

#### Open loop sensor object #1

A sensor can be connected to the rotary actuator. A passive resistance sensor (e.g. Ni1000), an active sensor (output 0 ... 32 V) or a switch (on/off) can be connected. The open loop sensor object transfers the measured sensor values to the LONWORKS® network.

#### nvoSensorValue SNVT\_xxx

This output variable shows the current sensor value. Depending on the connected sensor, the output variable can be configured via the sensor plug-in and specifically adapted to the system.

| The SNVT can be configured as: |                  |                 |  |  |
|--------------------------------|------------------|-----------------|--|--|
| SNVT_temp_p                    | SNVT_lev_percent | SNVT_lux        |  |  |
| SNVT_temp                      | SNVT_abs_humid   | SNVT_press_p    |  |  |
| SNVT_switch                    | SNVT_enthalpy    | SNVT_smo_obscur |  |  |
| SNVT_flow                      | SNVT_ppm         | SNVT_power      |  |  |
| SNVT_flow_p                    | SNVT_rpm         | SNVT_elec_kwh   |  |  |

#### Notes

Detailed information on the functional profiles can be found on the website of LonMARK $^{\otimes}$  (www.lonmark.org).

# BELIMO

### **AMX24-LON** LonWorks<sup>®</sup>, Non-Spring Return, 24 V



| 1 | Direction of rotation switch  |   |  |  |
|---|---|---|--|--|
|   | Switching over  | Direction of rotation changes   |  |  |
| 2 | Pushbutton and green LED display  |   |  |  |
|   | Off   | No voltage supply or malfunction  |  |  |
|   | Green, on   | Operation   |  |  |
|   | Press button  | Switches on angle of rotation adaption followed<br>by standard operation  |  |  |
| 3 | Service button for commissioning LONWORKS® and<br>yellow LED display for the LON status |   |  |  |
|   | Off   | The SR24ALON-5 rotary actuator is connected<br>and ready for operation in the<br>LONWORKS®network.                  |  |  |
|   | Yellow, on  | No application software is loaded in the SR24ALON-5.  |  |  |
|   | Yellow, flashing<br>(flashing interval 2 seconds)                                       | The SR24ALON-5 is ready for operation but not<br>integrated in the LONWORKS <sup>®</sup> network<br>(unconfigured). |  |  |
|   | Other flashing codes  | A fault is present in the SR24ALON-5.   |  |  |
|   | Press button  | Service Pin Message is sent to the LONWORKS®network.  |  |  |
| 4 | Gear disengagement switch   |   |  |  |
|   | Press button  | Gear disengaged, motor stops, manual operatio<br>possible   |  |  |
|   | Release button  | Gear engaged, synchronisation starts, followed by standard operation  |  |  |
| 5 | Service plug  | · · · ·   |  |  |
|   | For connecting MFT parameter  | rizing and service tools  |  |  |