



Part No. 24-11483-00000 Rev. A

2020-11-06

Applications

The Touch Advanced Display (TAD) is a comprehensive series of freely programmable operator interfaces featuring both IP and MSTP BACnet ® communication and graphic displays with a touch-screen interface. TAD Displays feature thin-film-transistor widescreen (16:9) displays of different sizes with a fully dimmable LED backlight and resistive touch interface. The integrated HTML 5.0 web server grants remote access whenever the units are connected to an accessible IP network.

Installation

Observe these guidelines when installing the TAD:

- Transport the display in the original container to minimize vibration and shock damage to the unit.
- Verify that all parts were shipped with the display.
- Do not drop the display or subject it to physical shock.

Parts included

- One Touchscreen Advanced Display
- Mounting clips
- DC power connector
- One installation instructions sheet

Materials and special tools needed

- Oscillating multi-tool or similar cutting tool for cutting a hole into the panel to hold the display, if no hole is provided
- DB9 connector. See Accessories
- Small Phillips-head screwdriver


Mounting

Mounting considerations

The design of the TAD series allows for multiple mounting options including panel front and flush mounting on a wall through utilization of the BOX0x-01 accessories. To ensure the front panel protection classifications as marked on the product nameplate, you must install the TAD on a flat surface of a Type 2, 4X enclosure, tightening the fixing brackets screws at 75Ncm for the appropriate cut-out:

- TAD0471-0: 136 mm x 96 mm (5.35 in. x 3.78 in.)
- TAD0701-0: 176 mm x 136 mm (6.90 in. x 5.35 in.)


• **TAD1001-0:** 271 mm x186 mm (10.66 in. x 7.32 in.) If you wish to disregard the aforementioned front panel protection classification, complete the steps found in Mounting the TAD on a drywall or Mounting the TAD on a masonry wall .

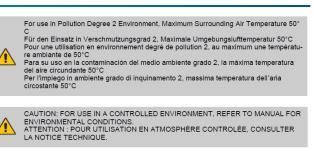

- O Note: The equipment is not intended for continuous exposure to direct sunlight as it accelerates the aging process of the front panel film.
- () Note: The equipment is not intended for installation in contact with corrosive chemical compounds. Check the resistance of the front panel film to a specific compound before installation.
- Note: Do not use tools of any kind (screwdrivers, etc.) to operate the touch screen of the panel.

Physical features

Figure 1: TAD physical features

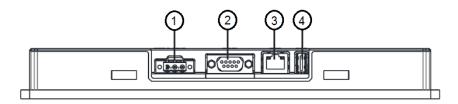

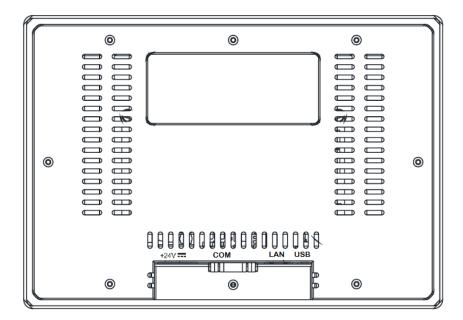


Table 1: Physical features callout

Callo ut	Description
1	Power supply (18-32Vdc)
2	Serial port (5V 100mA max.)
3	Ethernet port
4	USB port (version 2.0, 5V 500mA max)

Mounting dimensions

Refer to the following illustrations for the mounting dimensions and physical features of the TAD.

Figure 2: TAD mounting dimensions

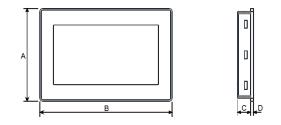


Table 2: TAD mounting dimensions

Model	Α	В	С	D
TAD0471-	107mm	147 mm	29 mm	5 mm
0	(4.21 in.)	(5.78 in.)	(1.14 in.)	(0.19 in.)
TAD0701-		187 mm	29 mm	5 mm
0		(7.36 in.)	(1.14 in.)	(0.19 in.)
TAD1001-	197 mm	282 mm	29 mm	6 mm
0	(7.75 in.)	(11.10 in.)	(1.14 in.)	(0.23 in.)

Figure 3: BOXxx-01 dimensions

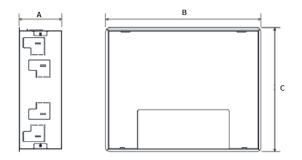


Table 3: BOXxx-01 dimensions

Model	Α	В	C
BOX04-01	50 mm (1.96	102 mm	142 mm
	in.)	(4.03 in.)	(5.61 in.)
BOX07-01	50 mm (1.96	142 mm	182 mm
	in.)	(5.61 in.)	(7.18 in.)
BOX10-01	50 mm (1.96	192 mm	277 mm
	in.)	(7.57 in.)	(10.92 in.)

Mounting the TAD on a drywall

The display can be wall-mounted using the BOXxx-01 wall box directly into drywall. Complete the following steps:

1. Use the dimensions found in Table 4 and illustrated in panel 1 of Figure 4 to measure what size hole you need and draw accurately.

Figure 4: Mounting a TAD on a drywall

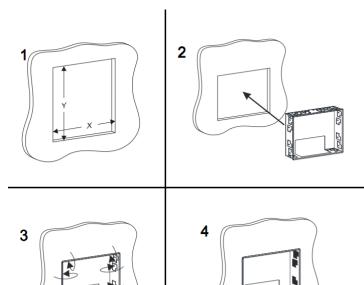


Table 4: Cut out dimensions

Model	X	Y
BOX04-01	144 mm (5.66 in.)	104 mm (4.09 in.)
BOX07-01	184 mm (7.24 in.)	144 mm (5.66 in.)
BOX10-01	279 mm (10.98 in.)	194 mm (7.63 in.)


- 2. Cut a hole in the drywall using an oscillating multitool or similar cutting tool.
- 3. Insert the box in the cutout and then route the wiring cables through the backplate.
- 4. Push out the tab fastners on the top, on the sides and on the base of the box. Ensure that the box is secure within the cutout. See panel 3 of Figure 4.
- 5. Attach the wiring cables. See Wiring for further information.
- 6. Insert the TAD into the box by pressing gently on each side of the casing until the display clicks into place.


Mounting the TAD on a masonry wall

The display can be wall-mounted using the BOXxx-01 wall box directly into a masonry wall. Complete the following steps:

1. Use the dimensions found in Table 5 and illustrated in panel 1 of Figure 5 to measure what size hole you need and draw accurately.

Figure 5: Mounting a TAD on a masonry wall

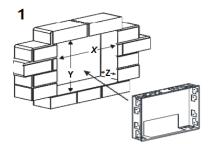

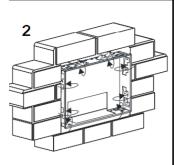

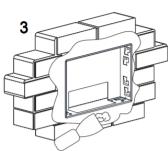


Table 5: Cut out dimensions

Model	x	Y	Z
BOX04-01	157 mm	118 mm	60 mm (2.36
	(6.18 in.)	(4.64 in.)	in.)
BOX07-01	198 mm	157 mm	60 mm (2.36
	(7.79 in.)	(6.18 in.)	in.)
BOX10-01	293 mm	207 mm	60 mm (2.36
	(11.53 in.)	(8.14 in.)	in.)

- 2. If no hole is provided, cut a hole in the masory using a concrete saw or similar cutting tool.
- 3. Insert the box in the cutout and then route the wiring cables through the backplate.
- 4. Push out the tab fastners on the top, on the sides and on the base of the box. Ensure that the box is secure within the cutout. See panel 2 of Figure 5
- 5. Secure the box using cement filler or a similar bonding agent.

- 6. Attach the wiring cables. See Wiring for further information.
- 7. Insert the TAD into the box by pressing gently on each side of the casing until the display clicks into place.

Wiring

Observe the following guidelines when wiring a TAD:

Risk of Electric Shock.

Disconnect the power supply before making electrical connections to avoid electric shock.

ATTENTION


Risque de décharge électrique.

Débrancher l'alimentation avant de réaliser tout raccordement électrique afin d'éviter tout risque de décharge électrique.

- Important: Do not connect supply power to the TAD before finishing wiring and checking all wiring connections. Short circuits or improperly connected wires can result in damage to the controller and void any warranty.
- Important: Do not exceed the TAD electrical ratings. Exceeding controller electrical ratings can result in permanent damage to the controller and void any warranty. See Technical specifications.
- Important: Use copper conductors only. Make all wiring in accordance with local, national, and regional regulations.
- Important: Electrostatic discharge can damage controller components. Use proper electrostatic discharge precautions during installation, setup, and servicing to avoid damaging the TAD.

Power the TAD units with 18 to 32 VDC supply voltage. The unit must always be grounded to earth. Use terminal 3 on the power supply terminal block for the earth connection. See the following figure for details on the correct wiring configuration.

For details on how to connect the TAD to a network of FX-PCs devices, refer to the *FX MS/TP Communications Bus Technical Bulletin (LIT-12011670)*.

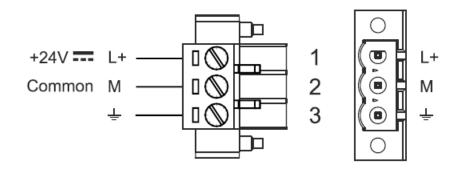

Serial port

The TAD serial port is used to communicate with other field devices. The serial port standard is software programmable. You must select RS485 for BACnet MSTP.

Figure 7: Serial port

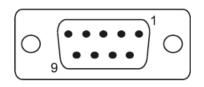


Table 6: Serial port

Pin	Description
1	GND
2	
3	TX/CHA-
4	RX/CHB-
5	
6	+5V output
7	CTS/CHB+
8	RTS/CHA+
9	

(i) Note: You must connect pins 4-3 and pins 8-7 externally to operate in RS485.

Setup and Adjustments

Ordering information

Table 7: Ordering codes

Product code	Description
TAD0471-0	109 mm (4.3 in.) Touchscreen Advanced Display
TAD0701-0	178 mm (7.0 in.) Touchscreen Advanced Display
TAD1001-0	254 mm (10.0 in.) Touchscreen Advanced Display

Accessories

Table 8: Ordering codes

Product code	Description
BOX04-01	Wall mount box for TAD04
BOX07-01	Wall mount box for TAD07
BOX10-01	Wall mount box for TAD10
DEMO-STAND07	Counter display structure for TAD07
TAD-DB9-0	DB-9 Serial Port Connector for BACnet MSTP.
TTT0103	Touchscreen Tailoring Tool, single license Key for 3 installations
TTT0110	Touchscreen Tailoring Tool, single license Key for 10 installations
TTT0130	Touchscreen Tailoring Tool, single license Key for 30 installations

Technical specifications

Table 9: Technical specifications

	TAD0471-0: 109 mm (4.3 in.) freely programmable Touchscreen Advanced Display
Product Code Number	TAD0701-0: 178 mm (7.0 in.) freely programmable Touchscreen Advanced Display
	TAD1001-0: 254 mm (10.0 in.) freely programmable Touchscreen Advanced Display
	TAD0471-0: 109 mm (4.3 in.) widescreen TFT 64k Colors, 480 x 272 and LED backlight
Display	TAD0701-0: 254 mm (10.0 in.) widescreen TFT 64k Colors, 800 x 480 and LED backlight
	TAD1001-0: 178 mm (7.0 in.) widescreen TFT 64k Colors, 1024 x 600 and LED backlight
Brightness	200 cd/m2
Touch-screen	Resistive
Supply voltage	18-32 VDC
Real-time clock	Yes
Ethernet Port	1 – Port 0 10/100
Serial Port	RS-232 / RS-422 / RS-485 Software Configurable
USB Port	1 – Host v. 2.0, max. 500 mA
	TAD0471-0: 250 mA max @ 24 VDC
Power consumption	TAD0701-0: 300 mA max @ 24 VDC
	TAD1001-0: 380 mA max @ 24 VDC
Ambient conditions	Operating: -0°C to +50°C (32°F to 122°F), 5 to 85% RH (noncondensing)
Amplent conditions	Storage: -20°C to +70°C (-4°F to 158°F), 5 to 85% RH (noncondensing)
	TAD0471-0: 107 mm x 147 mm x 24 mm (4.21 in x 5.78 in. x 0.945 in.)
Dimensions (H x W x D)	TAD0701-0: 147 mm x 187 mm x 24 mm (5.79 in. x 7.36 in. x 0.945 in.)
	TAD1001-0: 197 mm x 282 mm x 25 mm (7.75 in. x 11.10 in. x 0.984 in.)
	TAD0471-0: 0.88 lb. (0.4 kg)
Weight	TAD0701-0: 1.32 lb. (0.6 kg)
-	TAD1001-0: 2.2 lb. (1.0 kg)
	TAD0471-0: RAM, 256MB Flash, 2GB
Weight	TAD0701-0: RAM, 256MB Flash, 2GB
-	TAD1001-0: RAM, 512MB Flash, 4GB
	Protection: IP66 front, IP20 back.
Housing	(i) Note: IP66 rating is achieved strictly respecting the instructions provided.
	United States: UL Listed, File E515649, CCN NRAQ, UL 508, Programmable controllers; FCC test report
	available
Compliance	Canada: UL Listed, File E515649, CCN NRAQ7, CAN/CSA C22.2 No. 142, Programmable controllers certified
	for Canada; Industry Canada Compliant.
CE	Europe: CE Mark – Johnson Controls, Inc. declares that this product is in compliance with the essential
	requirements and other relevant provisions of the EMC Directive.
	Australia and New Zealand: RCM Mark, Australia/NZ Emissions Compliant

The performance specifications are nominal and conform to acceptable industry standards. For application at conditions beyond these specifications, consult the local Johnson Controls office. Johnson Controls, Inc. shall not be liable for damages resulting from misapplication or misuse of its products.

Product warranty

This product is covered by a limited warranty, details of which can be found at <u>www.johnsoncontrols.com/</u> buildingswarranty.

Single point of contact

APAC	Europe	NA/SA
JOHNSON CONTROLS	JOHNSON CONTROLS	JOHNSON CONTROLS
C/O CONTROLS PRODUCT	WESTENDHOF 3	507 E MICHIGAN ST
MANAGEMENT	45143 ESSEN	MILWAUKEE WI 53202
NO. 32 CHANGJIJANG RD NEW DISTRICT	GERMANY	USA
WUXI JIANGSU PROVINCE 214028		
CHINA		

Contact information

Contact your local branch office: www.johnsoncontrols.com/locations Contact Johnson Controls: www.johnsoncontrols.com/ contact-us

^{© 2020} Johnson Controls. All rights reserved. All specifications and other information shown were current as of document revision and are subject to change without notice.